

Dear customer,

Congratulations on choosing the Noctua NF-A4x20 PWM.

We from Noctua always strive to achieve superior quiet cooling performance regardless of whether it's a big 140mm fan or a small 40mm one. That's why the NF-A4x20 PWM sports many of the features and advanced aerodynamic design measures of our award-winning larger models, making it perhaps the most thoroughly optimised 40mm fan on the market.

Each Noctua fan is double checked for flawless operation by our quality control team before it leaves the factory and I'm confident that you will be able to sense some of the research, attention and care we've put into making this product.

Enjoy your NF-A4x20 PWM!

Yours sincerely,



Roland Mossig, Noctua CEO

This document includes some instructions for installing, running and cleaning your NF-A4x20 PWM.

Should you have any further questions, our support team (support@noctua.at) will be glad to assist you at any time.

Please also have a look at the regularly updated FAQs on our website: <http://www.noctua.at/faqs>

This document is also available in other languages at the following URL: <http://www.noctua.at/manuals>



Scan this code to display multi-lingual manuals on your mobile phone.

Designed in Austria, Noctua's premium cooling components are internationally renowned for their superb quietness, exceptional performance and thoroughgoing quality.

Having received more than 6000 awards and recommendations from leading hardware websites and magazines, Noctua's fans and heatsinks are chosen by more than a hundred thousand satisfied customers around the globe.



sales@noctua.at | www.noctua.at



Installation

If you replace an existing 40mm fan with the NF-A4x20 PWM in devices such as storage or network solutions, it is usually best to use the screws (or other mounting mechanism) used for the original fan.

When installing the NF-A4x20 PWM as a case fan, you can either use the supplied mounting screws or NA-AV3 silicone anti-vibration mounts. For installing the fan using the NA-AV3 mounts, please first pull the F side through the fan's mounting holes until pawl 4 is all the way through the hole.

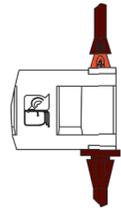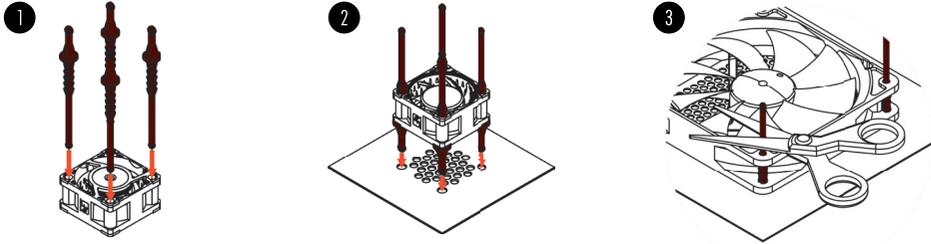

Caution: Only pull pawl 4 through the first hole.

Don't overstretch the mounts by pulling further pawls through!

Then pull the C side through the mounting holes of the case. If the long ends of the mounts are in the way, you can use scissors to cut them after installation. Note that this will then make them difficult to reinstall in the future.

Connection

The NF-A4x20 PWM comes with a 4-pin PWM fan connector for fully automatic speed control via your mainboard's 4-pin PWM fan headers. Please note that the fan can also be connected to your mainboard's 3-pin fan headers though. When connected to 3-pin fan headers, the NF-A4x20 PWM will run at full speed (unless the mainboard supports voltage based speed control).

If you're using multiple NF-A4x20 PWM fans, you can use the supplied y-cable (NA-YC1) to connect several fans to one PWM fan header. This way, your mainboard will set all the connected fans to run at the same speed.

If you would like to connect the fan to other fan headers, please use the supplied OmniJoin adaptor set as described below.

The NF-A4x20 PWM features a short 20cm primary cable in order to help you minimise cable clutter in typical applications. If you need a longer cable, please add the supplied 30cm extension (NA-EC1).


The NF-A4x20 PWM comes with a Low-Noise Adaptor (NA-RC7) that allows you to reduce the fan speed from 5000 to 4400rpm. You can either use the adaptor to set the fan to a fixed speed of 4400rpm (if speed control is deactivated) or to cap the maximum speed to 4400rpm during PWM speed control.

Using the OmniJoin adaptor set

The supplied OmniJoin adaptor set allows you to easily connect the NF-A4x20 PWM to proprietary fan headers if you want to replace a 40mm fan in devices such as network or storage solutions.

Please first identify the individual leads of the OmniJoin adaptor and the original fan. The OmniJoin adaptor uses black for ground (GND) and red for +12V.


The black lead of the adaptor has to be matched with the original GND lead and the red adaptor cable with the original +12V lead. Many fan cables use the same colours as the OmniJoin adaptor, but please note that there is no guarantee for this, so make sure to correctly identify the GND and +12V leads of the original fan. Please refer to the manual that came with the device or contact the device manufacturer if in doubt.

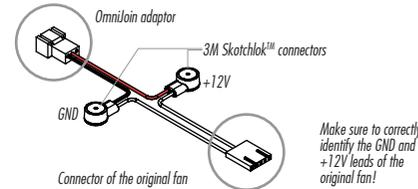

After you've identified the individual leads, please proceed with the following steps to install the OmniJoin adaptor:


Step 1

 Cut off the connector of the fan that was originally used in the device. Make sure not to cut the cable directly at the connector, there should be least a 2-3 cm of cable left:




Step 2

 Then take one of the supplied 3M Skotchlok™ connectors and insert the GND lead of the original cable and the black lead of the OmniJoin adaptor into the two holes of the Skotchlok™ connector. Make sure that both leads are fully inserted and pushed all the way back.



Step 3

Then use flat nose pliers to push down the white button of the Skotchlok™ connector. Make sure that the button is not jammed and pushed all the way down. If the button is jammed, push it down from both sides of the Skotchlok™ connector using the flat nose pliers.

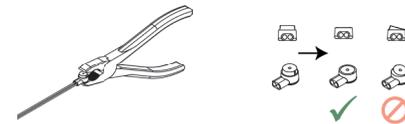

Repeat Step 2 and 3 for the +12V lead.

After you've fixed the original fan's cable to the OmniJoin adaptor using the Skotchlok™ connectors, simply connect the NF-A4x20 PWM to the adaptor in order to use it in your device.

Cleaning and Maintenance

Fans inside computer cases tend to accumulate dust over longer periods of usage. In order to maintain maximum performance, please clean your fans regularly using a duster, slightly moist tissue or canned air. Please be careful not to use too much force in order to prevent any damage to the fan. Please don't use a vacuum cleaner as this may apply excessive force to the fan.

In order to ensure flawless operation over many years of usage, the NF-A4x20 PWM's premium grade SSO2 bearing is fully sealed to prevent the entering of fine dust particles. Please note that the fan is not designed to be taken apart by the user. Removing the impeller from the frame will break the sealing of the bearing and results in a loss of warranty.

Warranty and Support

Even with high-grade products and strict quality control, the possibility of defects cannot be eliminated entirely. Therefore, we aim at providing the highest possible level of reliability and convenience by offering a warranty period of 6 years and direct, fast and straightforward RMA service. Should you encounter any problems with your NF-A4x20 PWM, please don't hesitate to contact our support team (support@noctua.at).