



**Appearance and key introduction**

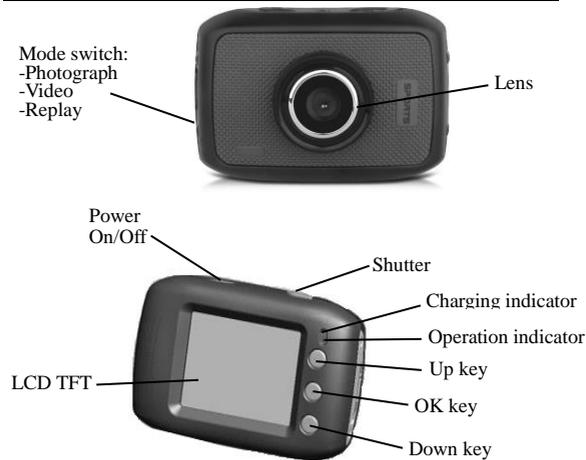

Key/Indicator	Function	
Power On/Off	Power the camera on or off. When opening the menu, switch over between normal (effect parameters and replay of image, video) and setup menu.	
Shutter	In recording video mode, it is used to start/stop recording. In capture mode, it is used as a shutter. In replay mode; it is used to play the video. When operating the menu, it is used to confirm the selection.	
Up key	Digital zoom in (capture/video mode); menu selection (after opening the menu); pause, continue playing (when playing and recording video in replay mode).	
OK key	Open/exit from menu. Stop playing (when replaying video).	
Down key	Digital zoom out (capture/video mode); menu selection (after opening the menu).	
Mode switch	Switch over among modes of capture, video and replay.	
Operation indicator	The upper one is a charging indicator.	In power-off state, it keeps constant lighting when the charger is connected for charging.
	The lower one is an operation indicator.	It flashes once during capturing, and it keeps constant lighting when connected with computer portable disk.

**Start Use**

**1. Charge built-in lithium battery**

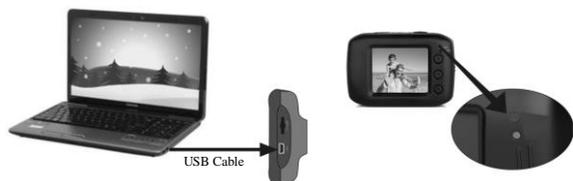

In power-off state, when the camera is connected with computer, charging begins. At this time, the charger indicator lights and it turns off when charged full. Generally, it costs 2-4 hours to charge full.

**2. Use memory card**

1. Follow the instructions carved by slot of the memory card, it is to insert FT card into the card slot till entirely inserted.
2. To take the FT card out, after gently pressing the end of the memory card inwards, the card will reject out.



**Please notice: UHS (ultra highspeed) cards doesn't work, as they are not 100% backward compatible**

**Note: The camera is not equipped with a built-in memory, and thus a memory card is required.**

**3. Power On/Off:**


- 3.1 Power-on: If to press and hold POWER key for 3 seconds, the screen starts up and the camera enters startup state.



- 3.2 Power-off: In idle state of the camera, if to click POWER key, the camera turns off.  
Automatic power-off: When idle time set for the camera reaches, it automatically turns off to save power. The default time of the system automatic power-off is 5 minutes;
- 3.3 Power-off due to low battery: In case of extremely low battery, the icon " [battery icon] " appears on the LCD screen. Please timely charge the battery. When the icon turns red and flashes, the camera will automatically power off.

**4. Functional mode switchover**

The camera is equipped with three modes: capture, video and replay mode. After power-on, the modes can be switched over with MODE switch.

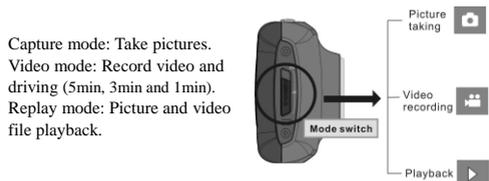

**5. Indicators**

**Operation indicator:** When the camera works (e.g. recording video, capturing or automatic screen turn-off), the operation indicator lights.

**Charger indicator:** Constant lighting is to remind user that the camera is being charged.

**6 Video mode**

( With maximum 29 minutes video recording per sequence)


**When pushing Mode switch to video mode, click shutter in preview state to start recording video; to stop video recording, it is to click it again. It will also automatically stop recording in case that no free room left in the memory card or the battery is over low:**

- 1 **00:00:01**: time-meter, indicating 1 second left for recording (indicating 1 second recorded during recording).
- 2 [video icon]: mode icon: indicates the current mode is video recording.
- 3 [loop icon]: loop recording video time icon: indicates the current loop video recording time is 3 minutes.
- 4 [720P icon]: movie size: indicates the current movie size is 720P.
- 5 [memory icon]: indicates currently a memory card is inserted.
- 6 [9 1.84]: magnification of digital zoom: press Up and down key to adjust zoom among 1x-4x.
- 7 [battery icon]: battery icon: indicates current battery level.
- 8 [AUTO icon]: white balance icon: indicates the current white balance mode is automatic.
- 9 [metering icon]: metering icon: indicates it is currently the pan overall perspective metering.

**Video menu setup**

In video mode, press OK key to open menu, and then press Up and Down key to select menu. When selecting menu, background of the selected item will be highlighted. Press Shutter to enter sub-menu. In sub-menu, press Up and Down key for selection, press Shutter for confirmation and back to main menu. In the main menu, press OK

key to exit from the menu.

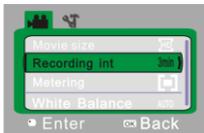

**▲ Video menu**

**7. Capture mode:**

**Push Mode switch to Capture mode. Press Shutter once in preview state for a picture taken:**

- 1 **9999**: Counter: indicates quantity of pictures available to be taken.
- 2 : mode icon: indicates it is currently the mode of capture.
- 3 : movie size: click this icon to select among 1M/3M/5M.
- 4 : indicates currently a memory card is inserted.
- 5 1.84: magnification of digital zoom: press Up and down key to adjust zoom among 1x-4x.
- 6 : battery icon: indicates current battery level.
- 7 : Self-timer icon: indicates the current self-timer mode is set to 10 seconds.
- 8 AUTO: white balance icon: indicates the current white balance mode is automatic.
- 9 : metering icon: indicates it is currently the pan overall perspective metering.

**8. Playback mode:**

**8.1 After power-on, push Mode switch back to Playback mode:**

- 1 : mode icon: indicates it is currently the mode of playback.
- 2 1/1: Indicates that there is one file in current folder/totally one folder.
- 3 : indicates that the current folder is locked.
- 4 : indicates the current file is a video file.

**8.2 Play movie clips:**



During playing, press Shutter key to play, press Up key for pause, press Shutter key to stop playing.


**8.3 Delete file:**



1) After selecting the file to be deleted, open the menu, press Up and Down key to select "Delete".



2) Press Shutter key to enter, after selecting "One", press Shutter key for confirmation). "All" means to delete all files.)

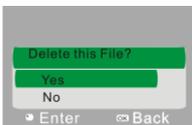

3) After selecting "Yes", press Shutter key to delete the file. When the file is deleted, press OK key to exit from the menu.

Warning

- Lithium battery inside!
- Do not try to open the product!
- Do not expose to heat, water, moisture, direct sunlight!

**CAUTION!**

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

**DENVER®**  
www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Fill in the blank with the model number of this player, so you can find it again later.

Imported by:  
DENVER ELECTRONICS A/S  
Stavneagervej 22  
DK-8250 EGAA  
Denmark  
www.facebook.com/denverelectronics