


Horizontal Cable Managers — **Installation**


AR8612, AR8603A, AR8605, AR8606

Inventory


Horizontal Cable Managers—6 inch deep

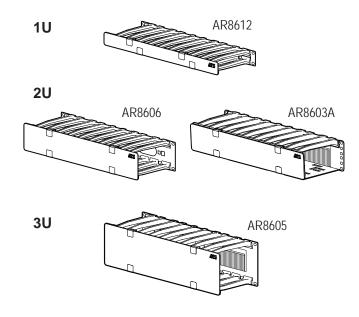

Hardware

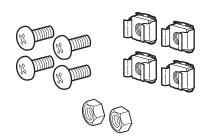


Tools required (not provided)

 


How to install and remove caged nuts

FALLING EQUIPMENT

 To ensure equipment installs securely, install cage nuts with tabs engaging the left and right sides of the square hole. Do NOT install cage nuts with tabs engaging the top and bottom of the square hole.



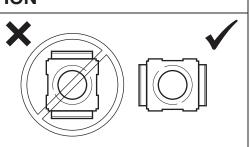


To install a cage nut:

- 1. From the inside of the enclosure insert the cage nut into the square hole by hooking a tab from one side of the cage nut onto one side of the opening.
- 2. Place the cage nut tool onto the tab on the opposite side of the cage nut and pull to snap it into position.

To remove a caged nut:


1. Squeeze the tabs together to release.

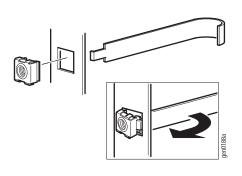


Installation

Adjust the vertical mounting rails


Adjust the depth of the vertical mounting rails, if needed, for non-networking enclosures.

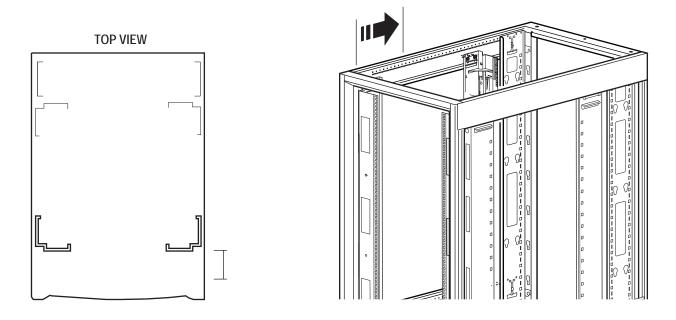


Install the Horizontal Cable Manager

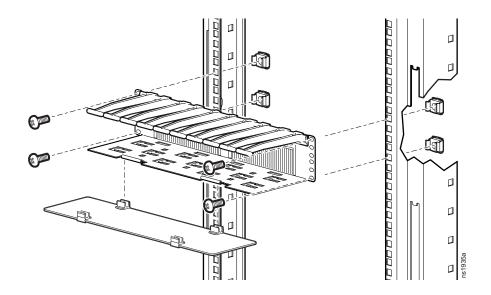


Installing back-to-back Horizontal Cable Managers

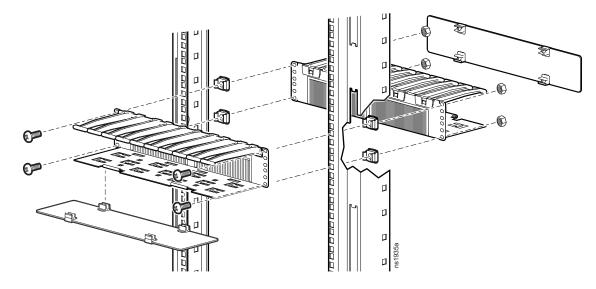


Cover Operation

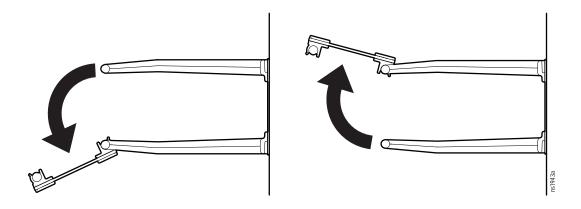

Accessories (not provided)

 

Cable retainer AR8621

 

Side channel cable trough AR8016ABLK, AR8008BLK

