

MUSE

M-05PK User Manual 4-BAND PORTABLE RADIO



PLEASE READ THE INSTRUCTION CAREFULLY
BEFORE OPERATING THE UNIT

SAFETY INFORMATION

- Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.
- Make sure that you keep your set away from water and high temperatures.
- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- To prevent personal injury, do not reverse any batteries and do not mix battery types.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The rating plate is located at the back cabinet of apparatus.
- Do not throw batteries in fire!




In full power, the continuous listening of the player may damage the user's hearing.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

LOCATION OF CONTROLS AND INDICATORS

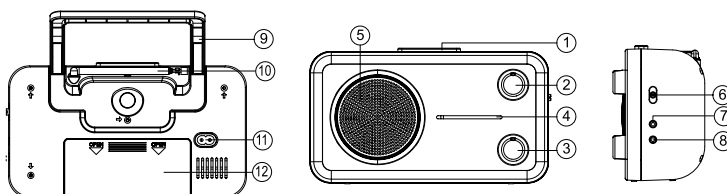

1. **ON/OFF** Button
2. **TUNING** Knob
3. **VOLUME** Knob
4. Dial Pointer
5. Speaker
6. **BAND (FM/SW/LW/MW)** Selector Switch
7. **AUX IN** Jack
8. Phone Jack
9. Carrying Handle
10. FM Telescopic Antenna
11. AC Cord Jack
12. Battery Compartment

GB - 1

POWER SUPPLY

Installing batteries

1. Remove the battery compartment door by applying thumb pressure to area indicated on battery door and then lift the door out and off the cabinet.
2. Before inserting the batteries, observe the polarities (+ and -) of the battery, then relate the polarities to the engraved diagram inside the battery compartment. Install 4 x C/R14/UM2 size batteries to battery compartment.
3. Replace the compartment door.

Battery precautions

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline an Carbon-Zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can over heat and rupture.
6. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.



Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Note:

- The AC cord must be unplugged from both the jack on the unit and the power outlet for the unit to run on the batteries.
- When the AC cord is connected from the main unit to the power outlet, the power source automatically switches to AC. You may leave the batteries inside the unit if you wish. There is no battery consumption when the AC cord is connected to a power outlet and/or the the unit.

Connecting power cord

1. Connect the detachable AC cord (included) to the AC socket on the rear of the unit.
2. Plug the power cord into 230V-50Hz AC outlet.

GB - 2

RADIO OPERATION

1. Press **ON/OFF** (1) to switch on the unit.
2. Slide the **BAND** button (6) to switch to the desired broadcast band (FM/SW/LW/MW).
3. Turn the **TUNING** knob (2) to select a station.
4. Adjust the volume level by the **VOLUME** knob (3).
5. You may lengthen the antenna located at the top of the unit for better reception of SW/FM stations. For LM or MW stations, you may try rotating the unit to get better reception.
6. Press **ON/OFF** button (1) again to switch off the radio.

LISTENING WITH EARPHONES

Connect the earphones (not included) to the earphone jack on unit.

CONNECTING THE AUX

Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the right side of the unit, the unit will change to AUX function automatically.

TECHNICAL SPECIFICATION

POWER SUPPLY :	AC 230V ~ 50 Hz DC 6V \equiv 4 x C / R14 SIZE (not included)
RADIO :	FM: 88 - 108 MHz SW: 6.0 - 18MHz LW: 150 - 280 KHz MW: 540 - 1600KHz
POWER CONSUMPTION:	3.5W
OUTPUT POWER:	300mW
UNIT DIMENSION:	130 (H)x88 (W)x230 (L) mm
N.W:	0.9 KG APPROXIMATELY

GB - 3

