

# Phone rescue kit multifunctional

## General information

Rescue kit to remove water from personal electronic devices, such as phones, MP3 players, cameras, remotes, watches and other objects that fit in the bag, to avoid permanent water damage.

Important: immediate action is required by following the steps below, which can also be found in the included manual.

1. Turn off the device.
2. Carefully dry it with a soft cloth.
3. If possible, remove the battery, memory card and other small parts.
4. Open the rescue bag. Do not take out the white rescue pouch inside. Carefully put the device in the plastic bag and reclose it. The pearls in the pouch immediately start to absorb all moisture.
5. Wait for at least 24 hours (for a small devices, such as mobile phones) to 48 hours (for larger devices, such as tablets) before taking out the device.

## Specifications

Usage: Smartphone

## Package contents

1x rescue kit  
manual



## Sales information

Order code: **CSSPRK100**  
 Product description: Phone rescue kit multifunctional  
 Packaging: Giftbox with eurolock  
 Brand name: König



Quantity	LxWxH (mm)	Weight
1	175x25x210	220 gr.
24	380x230x400	6140 gr.