



ALPINE

M-087R

User Manual

2-BAND PORTABLE RADIO PLL



PLEASE READ THE INSTRUCTION CAREFULLY
BEFORE OPERATING THE UNIT.

English

SET CLOCK

After the batteries are installed, the display will show "00:00"

1. Press **MEMO/SET** once and you will see the flashing display.
2. Press **MIN.** ◀◀ / ▶▶ **HOUR** to set the time.
3. Press **MEMO/SET** again when finished.

RADIO

Using the radio

1. Press the **ON / OFF** to turn on the radio.
2. Press **BAND** to select AM or FM bands.
3. Press **MIN.** ◀◀ / ▶▶ **HOUR** or to tune to your desired radio station.
4. Adjust the volume by (10).
To enhance radio reception ability:
FM: Extend and rotate the antenna
AM: Rotate and move the unit horizontally for optimum reception.

Saving Preset Stations

1. Tune to a station to be saved as a preset station (see "Using the Radio").
2. Press **MEMO / SET** once and you will see a flashing 'MEMORY' on the display.
3. Press **MEMO button** ▲ / ▼ to select a preset number.
4. Press **MEMO / SET** to save station as selected preset number.
5. Repeat above steps to preset a maximum of 10 stations for AM and FM respectively.

Selecting Preset Stations

1. Make sure you are in preset mode.
2. Press **MEMO button** ▲ / ▼ to select a preset number.

SETTING THE ALARM


1. Press **ALARM** that you will see a flash 'ALARM' on the display.
2. Press **MIN.** ◀◀ / ▶▶ **HOUR** to adjust your desired alarm time. The display will revert to current time after 5 seconds from your adjustment.

Stopping the alarm

When the alarm is triggered, press **ALARM** button to stop it.

3 - GB

GENERAL CONTROLS

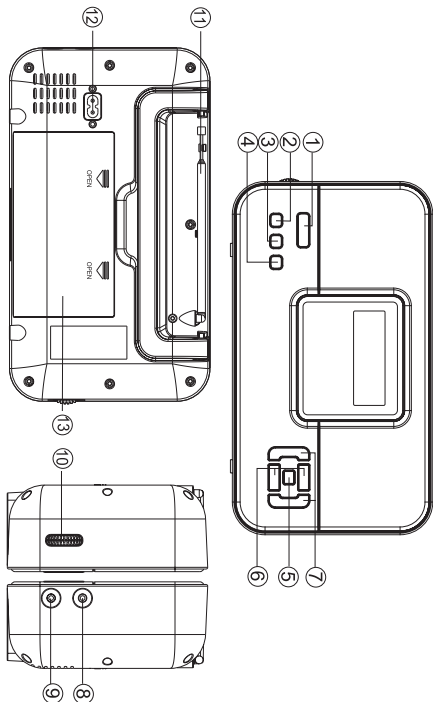

1. ON / OFF switch
2. BAND button
3. SLEEP button
4. ALARM button
5. M button (MEMO / SET)
6. MEMO button ▲ / ▼
7. MIN. ◀◀ / ▶▶ HOUR button
8. AUX IN Jack
9. PHONE Jack
10. VOLUME control
11. FM telescopic antenna
12. AC power cord
13. Battery Compartment

1 - GB

TO CANCEL THE ALARM SETTING

1. Press **MEMO / SET** that the display will flash.
2. Press **ALARM** twice and the 'ALARM' indicator disappear, the alarm stop.

SLEEP TO MUSIC

1. Press **SLEEP** to select among off 90.80.70..... 10 minutes. Then change to the radio automatically and you will see the 'SLEEP' on the display.

LISTENING WITH EARPHONES

Connect the earphones (not included) to the earphone jack on unit.



In full power, the continuous listening of the player may damage the user's hearing.

CONNECTING POWER CORD

1. Connect the detachable AC cord (included) to the AC socket on the rear of the unit.
2. Plug the power cord into 230V-50Hz AC outlet.

Note:

- The AC cord must be unplugged from both the jack on the unit and the power outlet for the unit to run on the batteries.
- When the AC cord is connected from the main unit to the power outlet, the power source automatically switches to AC. You may leave the batteries inside the unit if you wish. There is no battery consumption when the AC cord is connected to a power outlet and/or the the unit.

4 - GB

POWER SUPPLY

POWER SUPPLY

1. Remove the battery compartment door by applying thumb pressure to area indicated on battery door and then lift the door out and off the cabinet.
2. Insert 4 x 1.5 V "D" / R20 / UM1 batteries with the + and - marks correctly aligned (not included) into the compartment.
3. Replace the compartment door.

Notes on batteries

- Do not mix different types of batteries or old batteries with new ones.
- Never recharge the batteries, apply heat to them or take them apart.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.
- The batteries need to be replaced when:
The volume decreases, or sound is distorted during operation.

NOTE: In order to avoid leakage, always remove the batteries when unit will not be used for a long period of time.

CONNECTING THE AUX

Connect your auxiliary source (e.g: mp3 player) to the AUX input jack on the right side of the unit, the unit will change to AUX function automatically.

POWER ON / OFF THE UNIT

1. Press the **ON/OFF** to turn on the radio. The display will change to show radio frequency.
2. Press the **ON/OFF** to turn off the radio. The display will revert to current time.

2 - GB

MORE INFORMATION



CAUTION: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of " dangerous voltage" inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

IMPORTANT!

- The ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The use of apparatus in moderate climates.
- The apparatus should not be exposed to dripping or splashing.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- The marking plate is located on the bottom of unit.
- Mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnected the power input, the mains plug of the apparatus shall be disconnected from the mains completely. The mains plug should not be obstructed or should be easily accessed during intended use.
- Under the influence of electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require user to power reset.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

5 - GB

