

















Low Temperature high Performance

安装说明


AXP120-X67 系列

www.thermalright.com

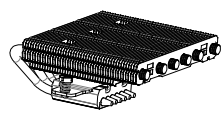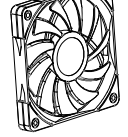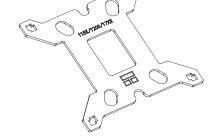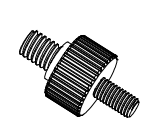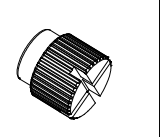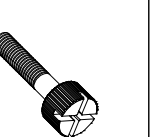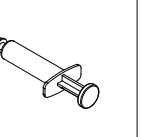配件清单

 A 散热器 x1	 B 风扇x1	 C LGA115X/1700背板 x1		
 D INTEL支架 x2	 E AMD支架x2	 F 15mm风扇线扣x2	 G 25mm风扇线扣x2	
 H LGA20XX螺丝 x4	 I 螺帽x4	 J AM4螺丝 x4	 K 导热膏 x1	
 L AM4胶柱x4	 M 螺柱 x4	 N 塑胶垫 x4	 O LGA 1700胶柱 x4	 P LGA 1200胶柱 x4

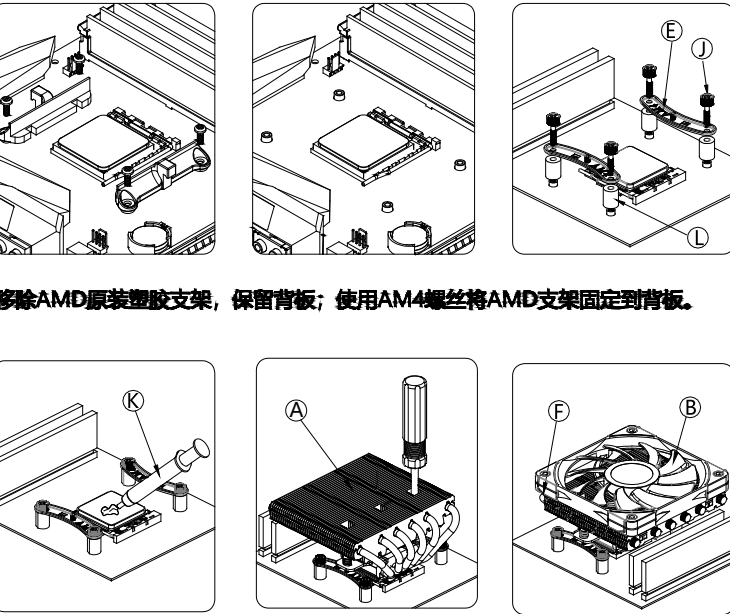
AMD AM4



移除AMD原装塑胶支架，保留背板，使用AM4螺丝将AMD支架固定到背板。

涂好导热膏，然后先贴好散热片，再固定风扇。

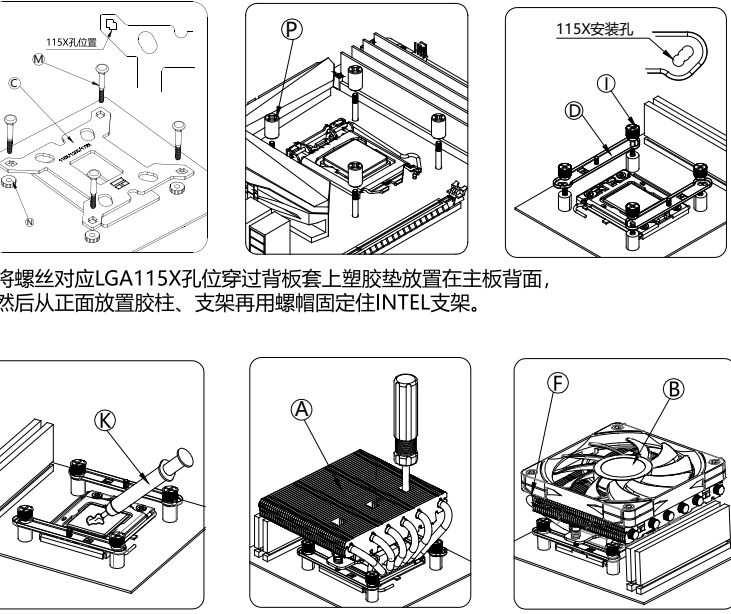
INTEL LGA115X/1200



将螺丝对应LGA115X孔位穿过背板上塑胶垫放置在主板背面，然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

涂好导热膏，然后先贴好散热片，再固定风扇。

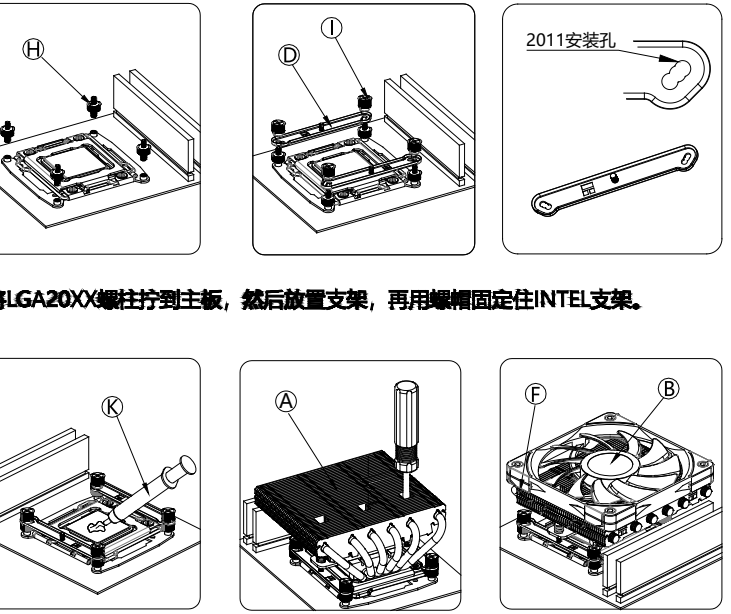
INTEL LGA20XX



将LGA20XX螺丝拧到主板，然后放置支架，再用螺帽固定住INTEL支架。

涂好导热膏，然后先贴好散热片，再固定风扇。

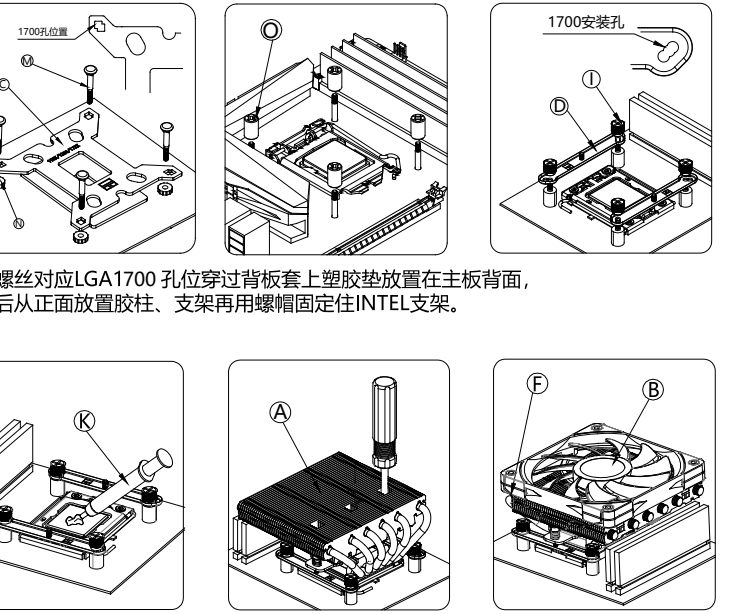
INTEL LGA1700



将螺丝对应LGA1700 孔位穿过背板上塑胶垫放置在主板背面，然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

涂好导热膏，然后先贴好散热片，再固定风扇。

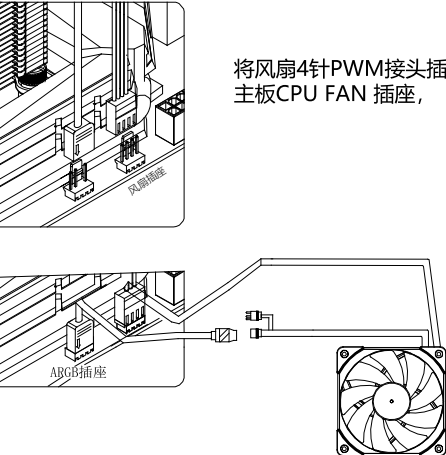风扇接线



将风扇4针PWM接头插入主板CPU FAN 插座，

如果风扇有 ARGB灯效。请将ARGB 3针（5V）插入主板对应 ARGB 3针插座或控制器，多风扇灯效可串联同步。



Low Temperature high Performance














Low Temperature high Performance

INSTALLATION GUIDE


AXP120-X67 Series

www.thermalright.com

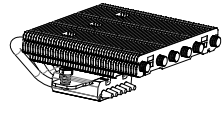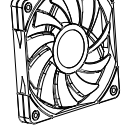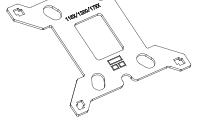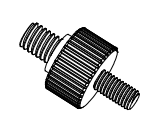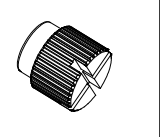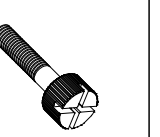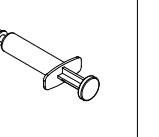parts list

 A Radiator x1	 B Fan x1	 C LGA115X/1700 Backplate x1		
 D INTEL Bracket x2	 E AMD Bracket x2	 F 15mm Fan Clip x2	 G 25mm Fan Clip x2	
 H LGA20XX Screw x4	 I Tightening Nut x4	 J AM4 Screw x4	 K Thermal Grease x1	
 L AM4 standoff x4	 M Screw x4	 N Plastic Washer X4	 O LGA1700 standoff x4	 P LGA1200 standoff x4

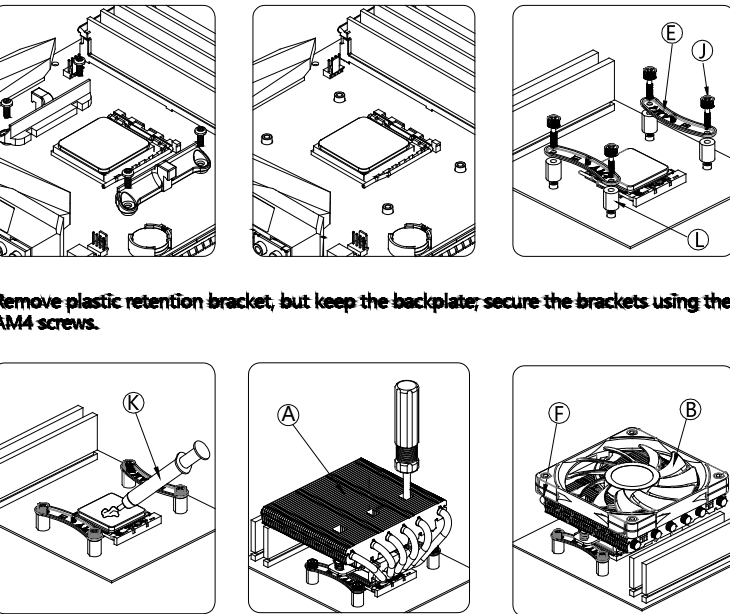
AMD AM4



Remove plastic retention bracket, but keep the backplate; secure the brackets using the AM4 screws.

Apply a thin layer of thermal grease; secure heatsink, and the fan with fan clips.

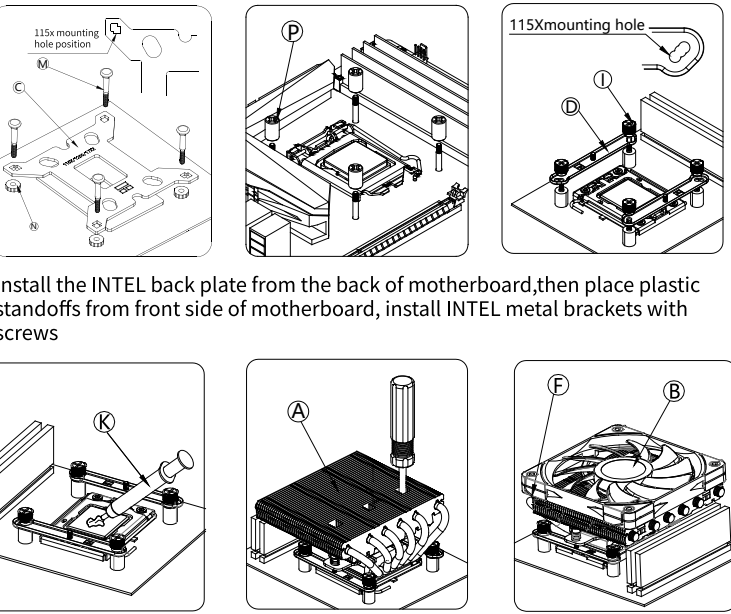
INTEL LGA115X/1200



Install the INTEL back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

Apply a thin layer of thermal grease; secure heatsink, and the fan with fan clips.

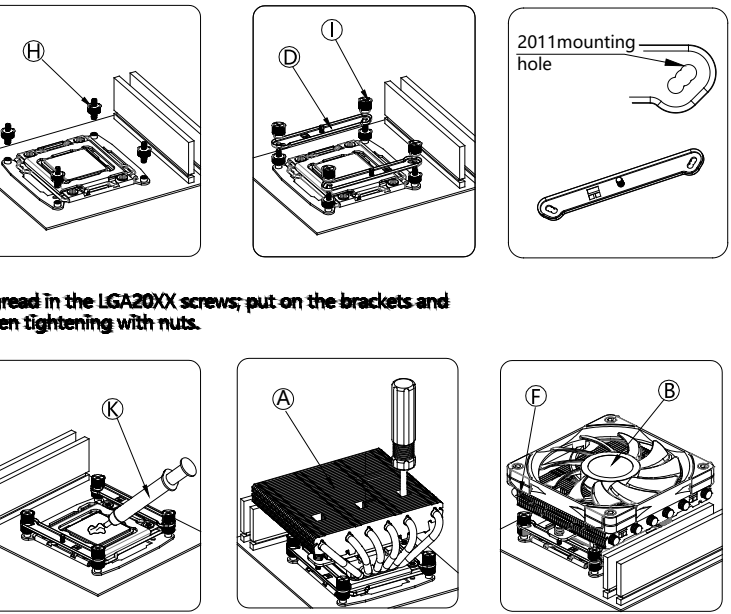
INTEL LGA20XX



Thread in the LGA20XX screws; put on the brackets and then tightening with nuts.

Apply a thin layer of thermal grease; secure heatsink, and the fan with fan clips.

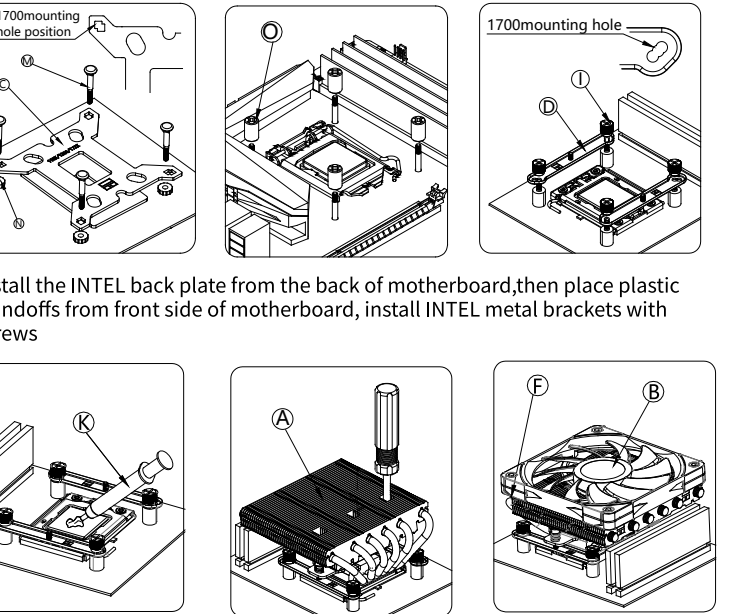
INTEL LGA1700



Install the INTEL back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

Apply a thin layer of thermal grease; secure heatsink, and the fan with fan clips.

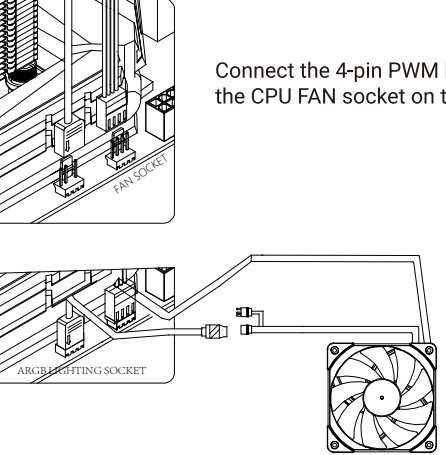Fan Wiring



Connect the 4-pin PWM header of fan into the CPU FAN socket on the motherboard.

If the fan has ARGB lamp effect, please insert ARGB lamp effect 3-pin (5V) into the motherboard corresponding to ARGB lamp effect socket or controller, and connect multiple fans in series.



Low Temperature high Performance