

*Tenda*

# User Guide

[www.tendacn.com](http://www.tendacn.com)



11N Broadband Wireless Router

## Copyright Statement

**Tenda** is the registered trademark of Shenzhen Tenda Technology Co., Ltd. All the products and product names mentioned herein are the trademarks or registered trademarks of their respective holders. Copyright of the whole product as integration, including its accessories and software, belongs to Shenzhen Tenda Technology Co., Ltd. Without prior expressed written permission from Shenzhen Tenda Technology Co., Ltd, any individual or party is not allowed to copy, plagiarize, reproduce, or translate it into other languages.

All photos and product specifications mentioned in this manual are for references only. Upgrades of software and hardware may occur; Tenda reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. If you would like to know more about our product information, please visit our website at <http://www.tendacn.com>.

## Contents

<b>COPYRIGHT STATEMENT .....</b>	<b>1</b>
<b>CHAPTER 1 PRODUCT OVERVIEW .....</b>	<b>1</b>
1 PACKAGE CONTENTS.....	1
2 LEDs AND PORTS.....	1
<b>CHAPTER 2 INSTALLATION AND QUICK SETUP GUIDE .....</b>	<b>3</b>
1 PHYSICAL INSTALLATION .....	3
1.1 Preparation.....	3
1.2 Physical installation.....	4
2 INTERNET CONNECTION SETUP.....	5
2.1 Log in to Web Manager.....	5
2.2 Internet Connection Setup.....	7
3 VERIFY INTERNET CONNECTION SETTINGS.....	9
4 CONNECT TO DEVICE WIRELESSLY .....	11
WIN7 Operation .....	11
Windows XP Operation.....	15
<b>CHAPTER 3 ADVANCED SETTINGS .....</b>	<b>18</b>
1 ADVANCED .....	18
1.1 Status.....	18
1.2 Internet Connection Setup .....	18
1.3 MAC Clone.....	24
1.4 WAN Speed .....	24
1.5 LAN Settings .....	24
1.6 DNS Settings .....	25
1.7 DHCP Server .....	26
1.8 DHCP Client List.....	26
2 WIRELESS SETTINGS .....	28
2.1 Wireless Basic Settings.....	28
2.2 Wireless Security .....	28
2.3 Wireless Extender.....	31
2.4 Wireless Access Control .....	41
2.5 Wireless Client.....	42
3 BANDWIDTH CONTROL .....	44
3.1 Bandwidth Control .....	44
3.2 Traffic Statistics.....	45
4 SPECIAL APPLICATIONS.....	47
4.1 Port Range Forwarding.....	47
4.2 DMZ Host.....	49
4.3 DDNS .....	49
4.4 UPNP .....	50
4.5 Static Routing .....	51
4.6 Routing Table.....	52
5 SECURITY .....	53
5.1 URL Filter.....	53
5.2 MAC Filter .....	54
5.3 Client Filter.....	56
6 TOOLS .....	58
6.1 Reboot.....	58

---

6.2 Restore to Factory Default Settings.....	58
6.3 Backup/Restore.....	58
6.4 Syslog.....	60
6.5 Remote Web Management.....	60
6.6 Time.....	61
6.7 Login Password.....	62
6.8 Firmware Upgrade.....	63
<b>APPENDIX 1 GLOSSARY.....</b>	<b>64</b>
<b>APPENDIX 2 VERIFY THE WDS CONNECTION.....</b>	<b>67</b>
<b>APPENDIX 3 FAQs.....</b>	<b>71</b>
<b>APPENDIX 4 REMOVE WIRELESS NETWORK FROM YOUR PC.....</b>	<b>73</b>
<b>APPENDIX 5 SAFETY AND EMISSION STATEMENT.....</b>	<b>76</b>

# Chapter 1 Product Overview

## 1 Package Contents

Unpack the box and verify that the package contains the following:

- (1) Wireless Broadband Router
- (2) Power Adapter
- (3) Quick Install Guide


If any of the above items is incorrect, missing, or damaged, please contact your Tenda reseller for immediate replacement.

## 2 LEDs and Ports

This part describes this device's hardware features. The topics include:

1) Wireless Router's front and back panels 2) LED designations


### ◆ Front Panel

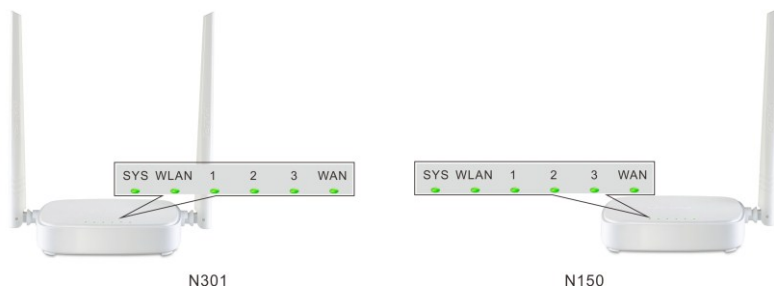

### Front LED Overview:

LED	Status	Description
SYS	Blinking	Indicates system is functioning properly
WLAN	Solid	Wireless is enabled
	Blinking	Transferring data
1/2/3	Solid	LAN port connected correctly
	Blinking	LAN port is transferring data
WAN	Solid	WAN port connected correctly
	Blinking	WAN port is transferring data

## ◆ Back Panel

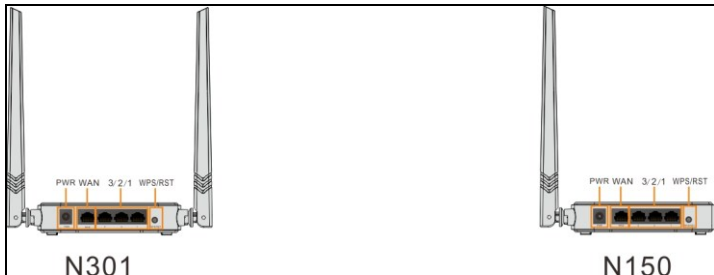

### Back LED Overview:

Port	Function Description
WAN	Usually for connecting DSL MODEM , CABLE MODEM、 ISP to the Internet.
1/2/3	Usually for connecting computers, switches .etc.
WPS/ RST	When you press this button for 7 seconds, files set by the router will be deleted and restored to default factory; for 1 second, WPS will be enabled and the WPS LED will be blinking accordingly.
PWR	The power adapter is connected and you can use the provided adapter to supply power.

## Chapter 2 Installation and Quick Setup Guide

### 1 Physical Installation


#### 1.1 Preparation

Before connecting network lines, please verify the following items:


Item	Description
Wireless Router	Used with the provided power supply
PC	Installed with IE8 or other better web browsers.
Ethernet Cable	Used for linking the PC to the router
Broadband Service	Provided by ISP
Internet Connection Setup	<ul style="list-style-type: none"><li>✧ If you connect to the Internet using a broadband connection that requires a username and a password provided by your ISP, please select PPPoE;</li><li>✧ If your ISP provides all the needed information: IP address, subnet mask, gateway address, and DNS address(es), please select Static IP;</li><li>✧ If you can access Internet as soon as your computer directly connects to an Internet-enabled ADSL/Cable modem, please select DHCP;</li><li>✧ If your ISP uses a PPTP connection, please select PPTP;</li><li>✧ If your ISP uses an L2TP connection, please select L2TP;</li><li>✧ PPPoE Dual Access (only supported in special Area e.g.Russia.).</li></ul>

## 1.2 Physical installation


1. Connect one end of the included power adapter to the device and plug the other end into a wall outlet nearby. (Using a power adapter with a different voltage rating than the one included with the device will cause damage to the device)

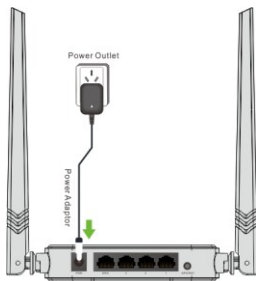

2. Connect one of the LAN ports on the Device to the NIC port on your PC using an Ethernet cable.

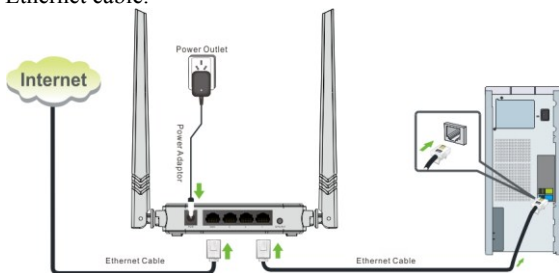

3. Connect the Ethernet cable from Internet side to the WAN port on the device. If it is connected to the telephone line, please link the telephone line to the MODEM and connect the MODEM to the WAN port on the device.

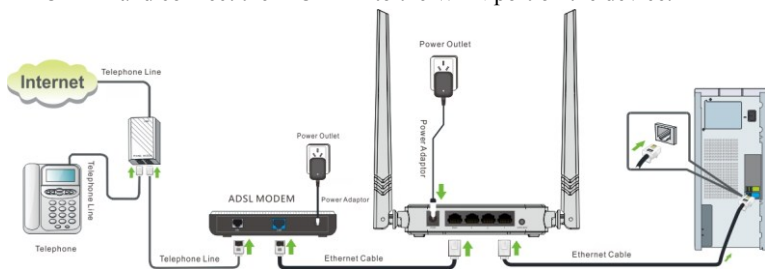

4. When connected, log in to Web manager to set up Internet connection.




## 2 Internet Connection Setup

### 2.1 Log in to Web Manager


1. Launch a web browser, such as IE Web browser;




2. In the address bar, input 192.168.0.1 and press **Enter**;

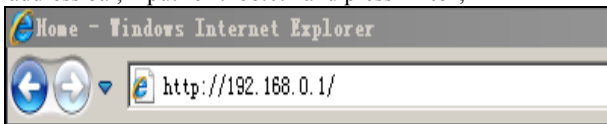

3. Enter **admin** in the password field on the appearing login window and then click **OK**.

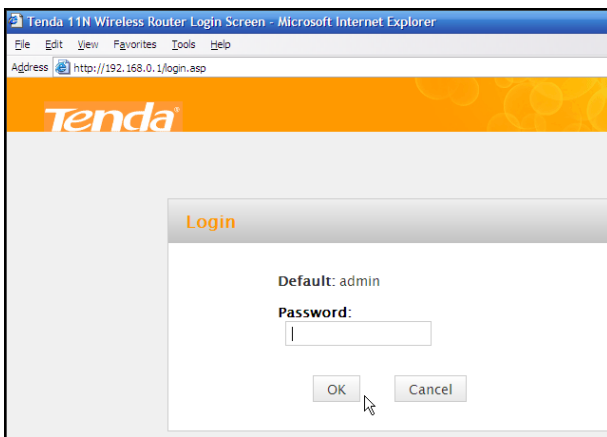

4. Now you may access the device's home page for quickly setting up Internet connection and wireless security.

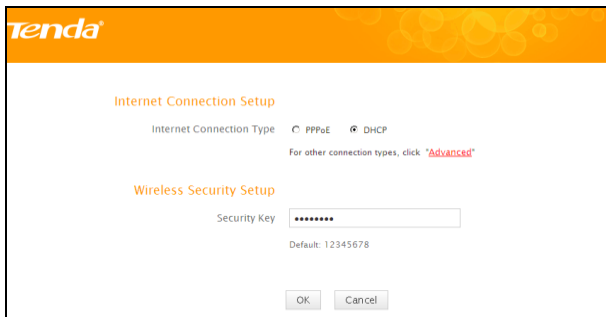

The screenshot shows the Tenda router's configuration interface. At the top is an orange header with the Tenda logo. Below it, the "Internet Connection Setup" section is visible, with "Internet Connection Type" set to "DHCP" (indicated by a checked radio button). A link for "Advanced" settings is present. The "Wireless Security Setup" section below it shows a "Security Key" field with masked characters and a default value of "12345678". "OK" and "Cancel" buttons are at the bottom.


5. If you fail to log in to it, please refer to [Appendix 3 FAQs](#).

## 2.2 Internet Connection Setup

Common Internet connection types are available on the home page: PPPoE and DHCP.

### DHCP

Select DHCP (Dynamic IP) if you can access Internet as soon as your computer directly connects to an Internet-enabled ADSL/Cable modem; configure a security key (8-63 characters) to secure your wireless network and then click OK.

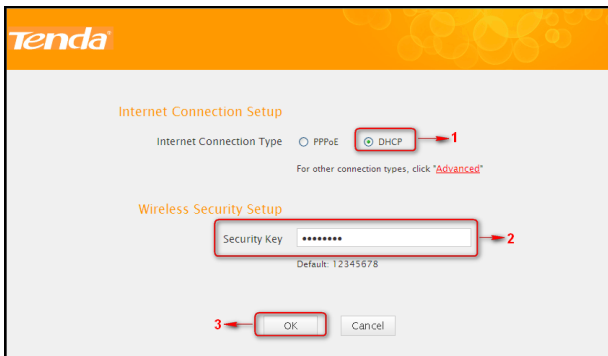

The screenshot shows the 'Internet Connection Setup' page on a Tenda router. The 'Internet Connection Type' section has two radio buttons: 'PPPoE' and 'DHCP'. The 'DHCP' button is selected and highlighted with a red box and a red arrow labeled '1'. Below this, there is a note: 'For other connection types, click "Advanced"'. The 'Wireless Security Setup' section has a 'Security Key' text box containing several asterisks, highlighted with a red box and a red arrow labeled '2'. Below the text box is the text 'Default: 12345678'. At the bottom, there are two buttons: 'OK' and 'Cancel'. The 'OK' button is highlighted with a red box and a red arrow labeled '3'.

### PPPoE

Select PPPoE (Point to Point Protocol over Ethernet) if you used to connect to the Internet using a broadband connection that requires a username and a password. Enter the user name and password provided by your ISP; configure a security key to secure your wireless network and then click OK.



The screenshot shows the 'Internet Connection Setup' page on a Tenda router. The 'Internet Connection Type' section has two radio buttons: 'PPPoE' and 'DHCP'. The 'PPPoE' button is selected and highlighted with a red box and a red arrow labeled '1'. Below this, there is a note: 'For other connection types, click "Advanced"'. The 'Wireless Security Setup' section has a 'Security Key' text box containing several asterisks, highlighted with a red box and a red arrow labeled '3'. Below the text box is the text 'Default: 12345678'. The 'PPPoE Username' text box contains '075502462880@163.gd' and is highlighted with a red box and a red arrow labeled '2'. The 'PPPoE Password' text box contains several asterisks and is highlighted with a red box and a red arrow labeled '2'. At the bottom, there are two buttons: 'OK' and 'Cancel'. The 'OK' button is highlighted with a red box and a red arrow labeled '4'.


** Note:**

1. DHCP is the default Internet connection type;
2. If you are not sure about your PPPoE username and password, contact your Internet service provider (ISP) for help. For other Internet connection types, please go to section 1.2: Internet Connection Setup.


### 3 Verify Internet Connection Settings

System automatically skips to the status page when you finish all needed settings on the home page. Here you can see the system status and WAN connection status of the device.

1. If you find **"Connected"** and a WAN IP address displayed there (as shown below), you have got a wired internet access now.

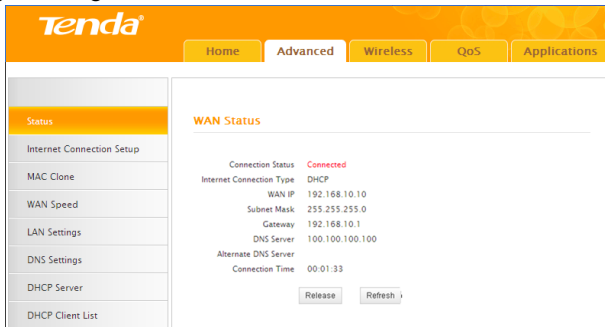

2. If connection status displays **"Disconnected"** and there is no WAN IP address displayed (as seen below), connection between the Internet-enabled modem and your device may have failed. Please double check or re-connect all involved devices and cables properly and then refresh the page. If nothing is wrong, **"Connecting"** or **"Connected"** will be displayed.

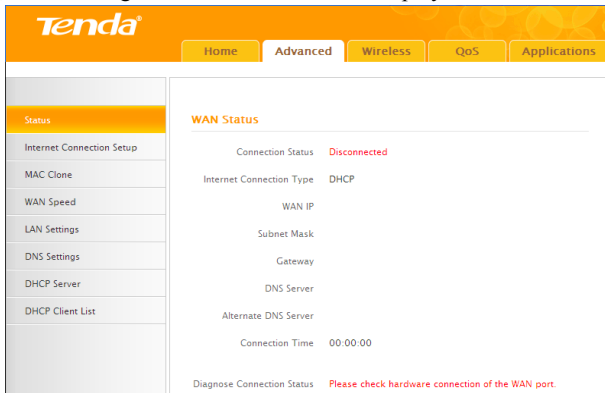

3. If **"Connecting"** is displayed and no WAN IP address is seen, try refreshing the page five times. And if it still displays **"Connecting"** try steps below:

- 1). Contact your ISP for assistance if you are using the DHCP connection type.
- 2). Read the connection diagnostic info on WAN status.



The screenshot displays the Tenda router's web interface. At the top, there is a navigation bar with tabs for Home, Advanced, Wireless, QoS, and Applications. The 'Advanced' tab is selected. On the left side, there is a sidebar menu with options: Status, Internet Connection Setup, MAC Clone, WAN Speed, LAN Settings, DNS Settings, DHCP Server, and DHCP Client List. The 'Status' option is highlighted. The main content area is titled 'WAN Status'. It shows the following information:

- Connection Status: **Connecting** (in red)
- Internet Connection Type: DHCP
- WAN IP: (empty)
- Subnet Mask: (empty)
- Gateway: (empty)
- DNS Server: (empty)
- Alternate DNS Server: (empty)
- Connection Time: 00:00:00

At the bottom of the WAN Status section, there is a red message: 'Diagnose Connection Status Please check hardware connection of the WAN port.'

**Note:**

Below diagnostic info will be displayed on particular occasions for your reference:

- 1). You have connected to Internet successfully.
- 2). You might have entered a wrong user name and/or a wrong password. Please contact your ISP for the correct user name and password and enter them again.
- 3). Ethernet cable is not connected or not properly connected to the WAN port on the device. Please reconnect it properly.
- 4). No response is received from your ISP. Please verify that you can access Internet when you directly connect your PC to an Internet-enabled modem. If not, contact your local ISP for help.


## 4 Connect to Device Wirelessly

Having finished above settings, you can search the device's wireless network (SSID) from your wireless devices (notebook, iPad, iPhone, etc) and enter a security key to connect to it wirelessly.


### WIN7 Operation

1. If you are using Windows 7 OS, do as follows:


1) Click **Start** and select **Control Panel**.

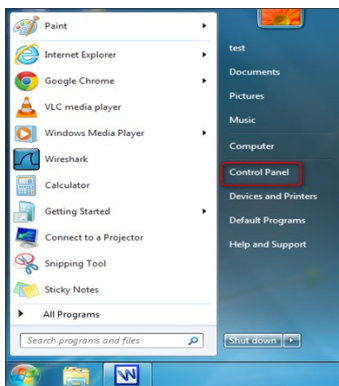


2) Click **Network and Internet**.

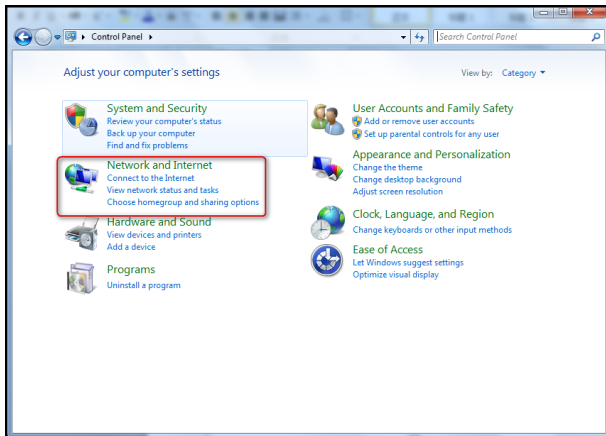

### 3) Click **Network and Sharing Center**.

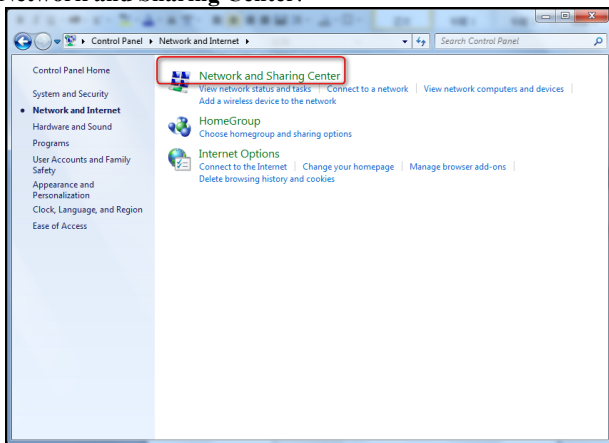


### 4) Click **Change adapter settings**.

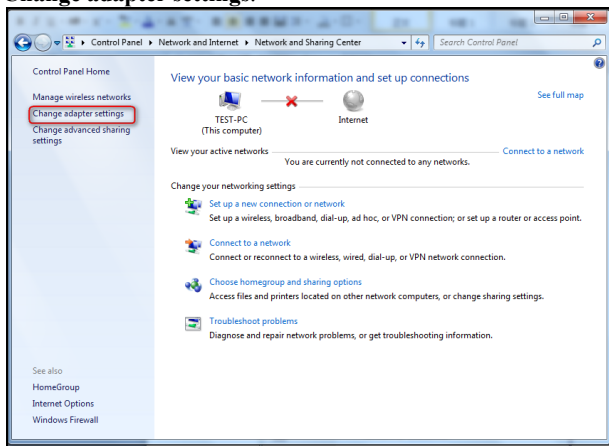




- 5) Select a desired wireless connection and click **Connect/Disconnect**.

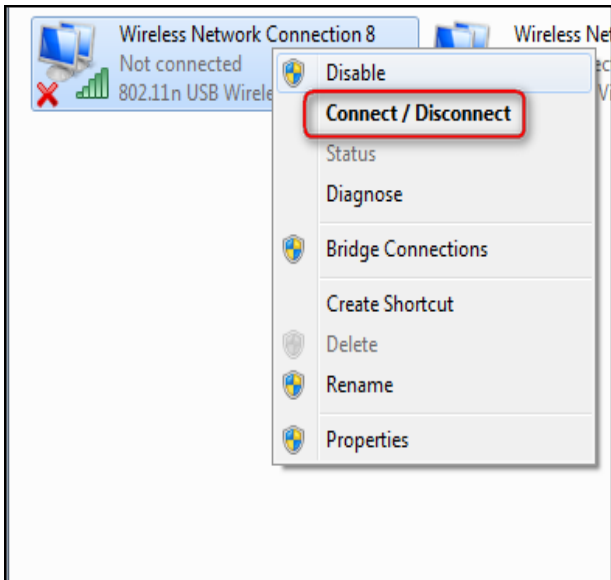

- 6) Select the wireless network you wish to connect and click **Connect**.



7) Enter the security key and click **OK**.

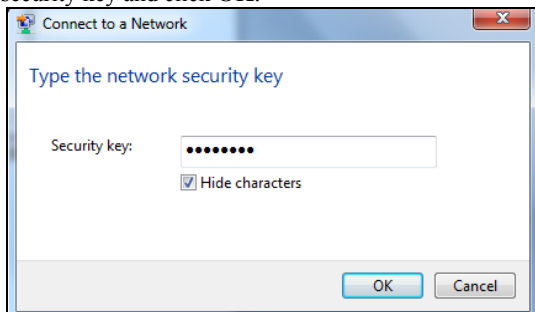


8) You can access Internet via the device when "**Connected**" appears next to the wireless network name you selected.




## Windows XP Operation

2. If you are using Windows XP OS, do as follows:


1) Click **Start** and select **Control Panel**.

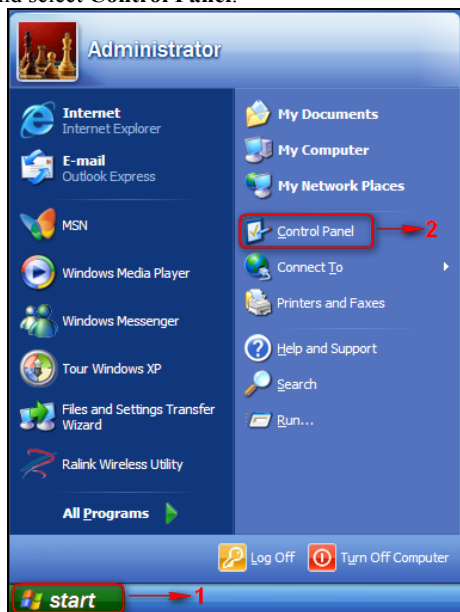


2) Click **Network Connections**.

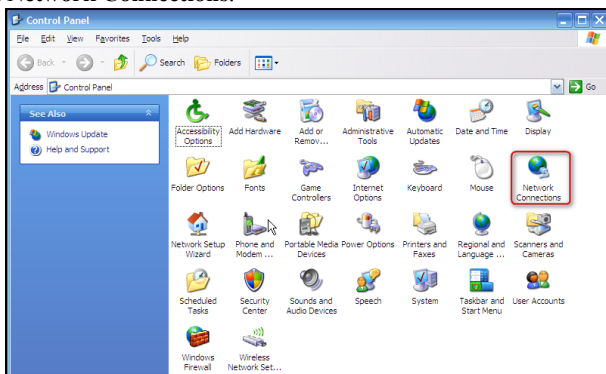


3) Right click **Wireless Network Connection** and then select **View Available Wireless Networks**.

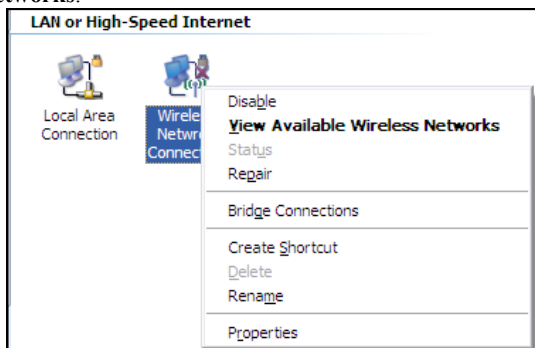

4) Select the desired wireless network, click Connect, enter the security key and then click OK.

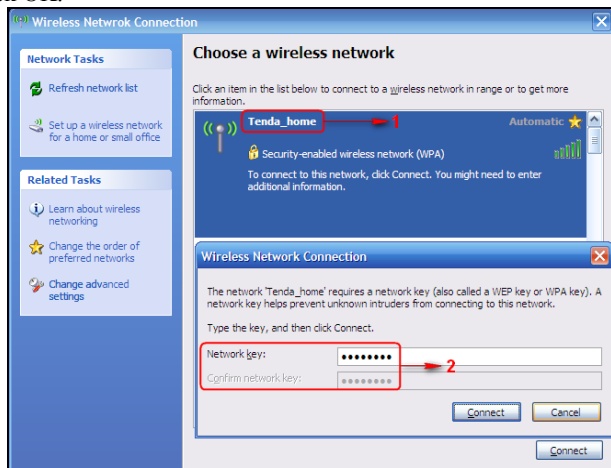

5) You can access Internet via the device when "**Connected**" appears next to the wireless network name you selected.

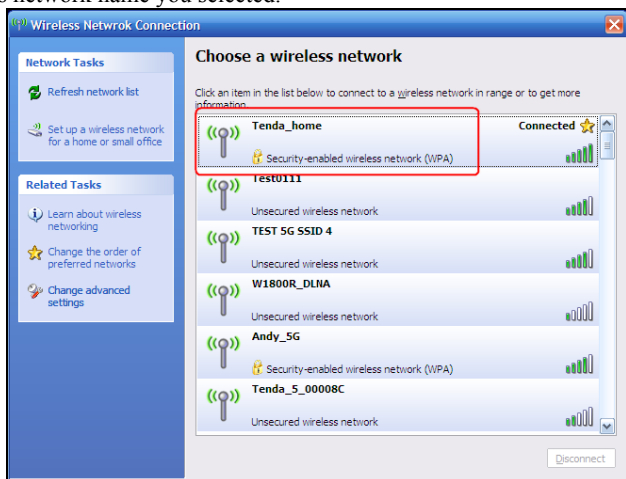

## Chapter 3 Advanced Settings

### 1 Advanced

#### 1.1 Status

Here you can see at a glance the operating status of the device. If WAN port displays **Disconnected**, please refer to [3 Verify Internet Connection Settings](#).

The screenshot displays the Tenda router's web interface. The top navigation bar includes 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The 'Advanced' tab is selected. On the left, a sidebar lists various settings: Status, Internet Connection Setup, MAC Clone, WAN Speed, LAN Settings, DNS Settings, DHCP Server, and DHCP Client List. The main content area is divided into two sections: 'WAN Status' and 'System Status'.

**WAN Status**

Connection Status	Connected
Internet Connection Type	DHCP
WAN IP	
Subnet Mask	
Gateway	
DNS Server	
Alternate DNS Server	
Connection Time	00:00:00
Diagnose Connection Status	Please check hardware connection of the WAN port.

**System Status**

LAN MAC Address	C8:3A:35:00:00:90
WAN MAC Address	C8:9C:DC:54:90:77
System Time	2011-04-01 08:18:34
Running Time	08:18:34
Connected Client	1
System Version	V5.07.54_en
Hardware Version	V1.0

#### 1.2 Internet Connection Setup

##### PPPoE

Select PPPoE (Point to Point Protocol over Ethernet) if you used to connect to the Internet using a broadband connection that requires a username and a password and enter the user name and password provided by your ISP.

**Tenda**

Home **Advanced** Wireless QoS Applications

Status

**Internet Connection Setup**

Internet Connection Type:

PPPoE Username:

PPPoE Password:

MTU:   
(The default value is 1492. Do not modify it unless required by your ISP.)

Service Name:   
(Only enter this information if instructed by ISP.)

Server Name:   
(Only enter this information if instructed by ISP.)

Select the corresponding connection mode according to your situation.

Connect automatically: Connect automatically to the Internet after rebooting the system or connection failure.

## Static IP

Select Static IP if your ISP provides all the needed info. You will need to enter the provided IP address, subnet mask, gateway address, and DNS address(es) in corresponding fields.

**Tenda**

Home **Advanced** Wireless QoS Applications

Status

**Internet Connection Setup**

Internet Connection Type:

IP Address:

Subnet Mask:

Gateway:

DNS Server:

Alternate DNS Server:  (Optional)

MTU:   
(The default value is 1500. Do not modify it unless required by your ISP.)

1. Click **Advanced**.
2. Click **Internet Connection Setup**.
3. Internet connection Type: Select Static IP.

4. IP Address: Enter the IP address provided by your ISP. Consult your ISP if you are not clear. Consult your ISP if you are not clear.
5. Subnet mask: Enter the subnet mask provided by your ISP.
6. Gateway: Enter the WAN Gateway provided by your ISP.
7. DNS Server: Enter the DNS address provided by your ISP.
8. OK: Click it to save all your settings.

## DHCP

Select **DHCP** (Dynamic IP) if you can access Internet as soon as your computer directly connects to an Internet-enabled ADSL/Cable modem.

The screenshot displays the Tenda router's web interface. At the top, there is a navigation bar with tabs for 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The 'Advanced' tab is selected. On the left side, there is a sidebar menu with options: 'Status', 'Internet Connection Setup' (highlighted), 'MAC Clone', 'WAN Speed', 'LAN Settings', 'DNS Settings', 'DHCP Server', and 'DHCP Client List'. The main content area is titled 'Internet Connection Setup'. It features a dropdown menu for 'Internet Connection Type' set to 'DHCP'. Below it is a text input field for 'MTU' with the value '1500'. A note below the MTU field reads: '(The default value is 1500. Do not modify it unless required by your ISP.)'. At the bottom of the form, there are two buttons: 'OK' and 'Cancel'.

1. **Internet connection Type:** Select DHCP.
2. **MTU:** Maximum Transmission Unit. DO NOT change it from the factory default of 1500 unless instructed by your ISP. You may need to change it for optimal performance with some specific websites or application software that cannot be opened or enabled; in this case, try 1450, 1400, etc.
3. **OK:** Click it to save your settings.

## PPTP

Select PPTP (Point-to-Point-Tunneling Protocol) if your ISP uses a PPTP connection. The PPTP allows you to connect a router to a VPN server.

### For example :

A corporate branch and headquarter can use this connection type to implement mutual and secure access to each other's resources.



1. **Internet connection Type:** Displays the current Internet connection type.
2. **PPTP Server Address:** Enter the IP address of a PPTP server.
3. **User Name:** Enter your PPTP User Name.
4. **Password:** Enter the password.
5. **MTU:** Maximum Transmission Unit. DO NOT change it from the factory default of 1492 unless instructed by your ISP. You may need to change it for optimal performance with some specific websites or application software that cannot be opened or enabled; in this case, try 1450, 1400, etc.
6. **Address Mode:** Select "Dynamic" if you don't get any IP info from your ISP, otherwise select "Static". Consult your ISP if you are not clear.
7. **IP Address:** Enter the IP address provided by your ISP. Consult your ISP if you are not clear.
8. **Subnet mask:** Enter the subnet mask provided by your ISP.
9. **Gateway:** Enter the WAN Gateway provided by your ISP. Consult your ISP if you are not clear.

## L2TP

Select L2TP (Layer 2 Tunneling Protocol) if your ISP uses an L2TP connection. The L2TP connects your router to a L2TP server.

### For Example :

A corporate branch and headquarter can use this connection type to implement mutual and secure access to each other's resources.

The screenshot shows the Tenda router's web interface. The top navigation bar includes 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The 'Advanced' tab is active. A sidebar on the left lists various settings, with 'Internet Connection Setup' selected. The main content area is titled 'Internet Connection Setup' and contains the following configuration options:

- Internet Connection Type: L2TP (selected from a dropdown)
- L2TP Server Address: [Empty text box]
- Username: [Empty text box]
- Password: [Empty text box]
- MTU: 1492
- Address Mode: Dynamic (selected from a dropdown)
- IP Address: 0.0.0.0
- Subnet Mask: 0.0.0.0
- Gateway: 0.0.0.0

At the bottom of the form are 'OK' and 'Cancel' buttons.

- Internet connection Type:** Displays the current Internet connection type.
- L2TP Server Address:** Enter the IP address of a L2TP server.
- User Name:** Enter your L2TP username.
- Password:** Enter the password.
- MTU:** Maximum Transmission Unit. DO NOT change it from the factory default of 1492 unless instructed by your ISP. You may need to change it for optimal performance with some specific websites or application software that cannot be opened or enabled; in this case, try 1450, 1400, etc.
- Address Mode:** Select "Dynamic" if you don't get any IP info from your ISP, otherwise select "Static". Consult your ISP if you are not clear.
- IP Address:** Enter the IP address provided by your ISP. Consult your ISP if you are not clear.
- Subnet mask:** Enter the subnet mask provided by your ISP.
- Gateway:** Enter the WAN Gateway provided by your ISP. Consult your ISP if you are not clear.



**Note:**

- PPPOE, PPTP and L2TP cannot be used simultaneously!
- For PPTP and L2TP Internet connections, only Static IP or Dynamic IP is available.
- Note that PPTP and L2TP may not be available on some products.

## PPPoE Dual Access


PPPoE dual access only supported in special Area e.g.Russia.

The screenshot shows the 'Internet Connection Setup' page in the Tenda router's web interface. The 'Advanced' tab is active. The 'Internet Connection Type' is set to 'PPPoE Dual Access'. The 'PPPoE Username' and 'PPPoE Password' fields are empty, with placeholder text 'Enter username provided by ISP' and 'Enter password provided by ISP' respectively. The 'MTU' field is set to '1492', with a note below it: '(The default value is 1492. Do not modify it unless required by your ISP.)'. The 'Service Name' and 'Server Name' fields are empty, with a note below each: '(Only enter this information if instructed by ISP.)'. The 'Address Mode' is set to 'Dynamic'. The 'IP Address' and 'Subnet Mask' fields are empty, with placeholder text '0.0.0.0'. The 'MTU' field is set to '1500', with a note below it: '(The default value is 1500. Do not modify it unless required by your ISP.)'. At the bottom, there are 'OK' and 'Cancel' buttons.

1. **Internet connection Type:** Displays the current Internet connection type.
2. **PPPoE User Name:** Enter the User Name provided by your ISP.
3. **PPPoE Password:** Enter the password provided by your ISP.
4. **MTU:** Maximum Transmission Unit. DO NOT change it from the factory default value unless necessary.
5. **Service Name:** Description of PPPoE connection. Leave blank unless otherwise required.
6. **Server Name:** Description of server. Leave blank unless otherwise required.
7. **Address Mode:** Select "Dynamic" if you don't get any IP info from your ISP, otherwise select "Static". Consult your ISP if you are not clear.
8. **IP Address:** Enter the IP address provided by your ISP. Consult your ISP if you are not clear.
9. **Subnet mask:** Enter the subnet mask provided by your ISP.

### 1.3 MAC Clone


Some Internet service providers (ISPs) require end-user's MAC address to access their network. This feature copies the MAC address of your network device to the router.

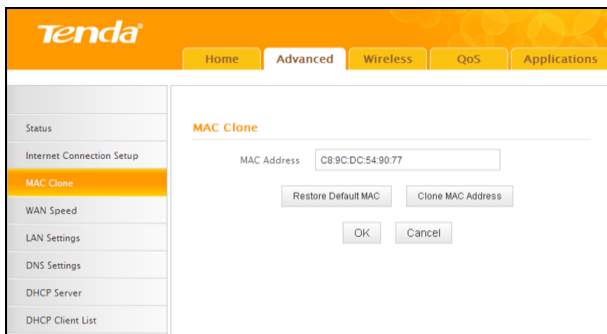

1. **MAC Address:** Configure device's WAN MAC address.
2. **Clone MAC Address:** Click to copy your PC's MAC address to the device as a new WAN MAC address.
3. **Restore Default MAC:** Reset device's WAN MAC to factory default.

### 1.4 WAN Speed

Here you can set the speed and duplex mode for WAN port. It is advisable to keep the default **Auto** setting to get the best speed.

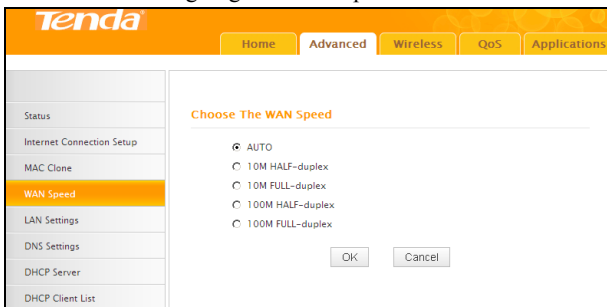

### 1.5 LAN Settings

Click **Advanced > LAN Settings** to enter the screen below:

**Tenda**

Home Advanced Wireless QoS Applications

Status

Internet Connection Setup

MAC Clone

WAN Speed

**LAN Settings**

DNS Settings

DHCP Server

DHCP Client List

**LAN Settings**

This page is used to set the basic network parameters for LAN.

LAN MAC Address C8:3A:35:00:00:90

IP Address 192.168.0.1

Subnet Mask 255.255.255.0

OK Cancel

1. **LAN MAC Address:** Displays device's LAN MAC address, which is NOT changeable.
2. **IP Address:** Device's LAN IP address. The default is 192.168.0.1. You can change it according to your need.
3. **Subnet Mask:** Device's LAN subnet mask, 255.255.255.0 by default.
4. **OK:** Click to save your settings.

**⚠️Note:** If the default IP address is changed, you must enter the new IP address to log in.

## 1.6 DNS Settings

DNS is short for Domain Name System or Domain Name Service.

**Tenda**

Home **Advanced** Wireless QoS Applications

Status

Internet Connection Setup

MAC Clone

WAN Speed

LAN Settings

**DNS Settings**

DHCP Server

DHCP Client List

**DNS Settings**

Enable Manual DNS Assignment

Primary DNS Address 172.16.100.205

Alternate DNS Address 8.8.8.8 (Optional)

Note: To activate new settings, you must reboot the device.

OK Cancel

1. **Enable Manual DNS Assignment:** Check to activate DNS settings.
2. **Primary DNS Server :** Enter the primary DNS address provided by your IPS.
3. **Alternate DNS Server :** Enter the other DNS address if your ISP provides such addresses (optional).


**4. OK:** Click to save your settings.

**⚠️ Note:**

1. Web pages are not able to open if DNS server addresses are entered incorrectly.
2. Do remember to reboot the device to activate new settings when you finish all settings.

## 1.7 DHCP Server

The Dynamic Host Configuration Protocol (DHCP) is an automatic configuration protocol used on IP networks. If you enable the built-in DHCP server on the device, it will automatically configure the TCP/IP settings for all your LAN computers (including IP address, subnet mask, gateway and DNS etc), eliminating the need of manual intervention. Just be sure to set all computers on your LAN to be DHCP clients by selecting "Obtain an IP Address Automatically" respectively on each such PC. When turned on, these PCs will automatically load IP information from the DHCP server. (This feature is enabled by default. Do NOT disable it unless necessary).

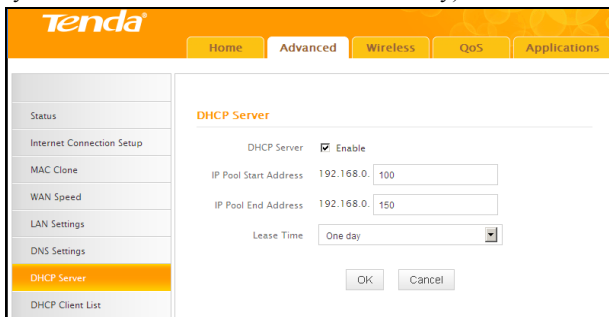

## 1.8 DHCP Client List

DHCP Client List displays information of devices that have obtained IP addresses from the device's DHCP Server. If you would like some devices on your network to always get the same IP addresses, you can manually add a static DHCP reservation entry for each such device.

The screenshot shows the Tenda router's configuration interface. The 'Advanced' tab is selected, and the 'DHCP Client List' sub-tab is active. The 'Static Assignment' section contains the following elements:

- IP Address: 192.168.0.123 (highlighted with a red box and number 1)
- MAC Address: 00 B0 C2 03 58 C5 (highlighted with a red box and number 2)
- An 'Add' button (highlighted with a red box and number 3)
- A table with one entry:

NO.	IP Address	MAC Address	Delete
1	192.168.0.123	00:80:C2:03:58:C5	Delete

The 'DHCP Client List' section includes a 'Refresh' button and a table with the following data:

Host Name	IP Address	MAC Address	Lease Time
INVE-20130520ND	192.168.0.101	C8:9C:DC:54:90:77	00:00:24

At the bottom, there is an 'OK' button (highlighted with a red box and number 4) and a 'Cancel' button.

- 1. IP Address:** Enter the IP address for static DHCP reservation.
- 2. MAC Address:** Enter the MAC address of a computer to always receive the same IP address (the IP you just specified).
- 3. Add:** Click to add the entry to the MAC address reservation list.
- 4. OK:** Click to save your settings.

### **Note:**

If the IP address you have reserved for your PC is currently used by another client, then you will not be able to obtain a new IP address from the device's DHCP server, instead, you must manually specify a different IP address for your PC to access Internet.

## 2 Wireless Settings

### 2.1 Wireless Basic Settings

If you want to create a WLAN for sharing Internet connection, simply click **Wireless-> Wireless Basic Settings**. Change the SSID, you can name it whatever you like. For example, select 2437MHz (channel 6) and leave other options unchanged and then click **OK**.

1. **SSID:** This is the public name of your wireless network. The default is Tenda\_XXXXXX. XXXXXX is the last six characters in the device's MAC address. It is recommended that you change it for better security and identification.
2. **Channel:** Select a channel that is the least used by neighboring networks from the drop-down list or Auto. Channels 1, 6 and 11 are recommended.
3. **OK:** Click to save your settings.

### 2.2 Wireless Security

#### Wireless Security Setup

This section allows you to secure your wireless network and block unauthorized



accesses and malicious packet sniffing. To encrypt your wireless network, do as follows:

1. Select the wireless network (SSID) you wish to encrypt.
2. Disable WPS. (WPS is enabled on the router by default. If you want to use other security modes, you must first disable the WPS.)
3. Select a proper security mode and cipher type (also known as WPA Algorithm or WPA Encryption Type). WPA-PSK and AES are recommended by system default (5 security modes are available for your selection. Among them, WPA-PSK outstands with greater compatibility and security. For more information of other security modes, see appendix 2). Specify a security key that includes at least 8 characters.
4. Click OK to complete your settings.

### Note:

You can also select other security modes as you need.

## WPS


Wi-Fi Protected Setup makes it easy for home users who know little of wireless security to establish a home network, as well as to add new devices to an existing network without entering long passphrases or configuring complicated settings. Simply enter a PIN code or press the software PBC button or hardware WPS button (if any) and a secure wireless connection is established.

### Operation Instructions:


**PBC:** To use WPS-PBC, try the way below:

Press the hardware WPS button on the router for about 1 second and then enable

WPS/PBC on the client device within 2 minutes;

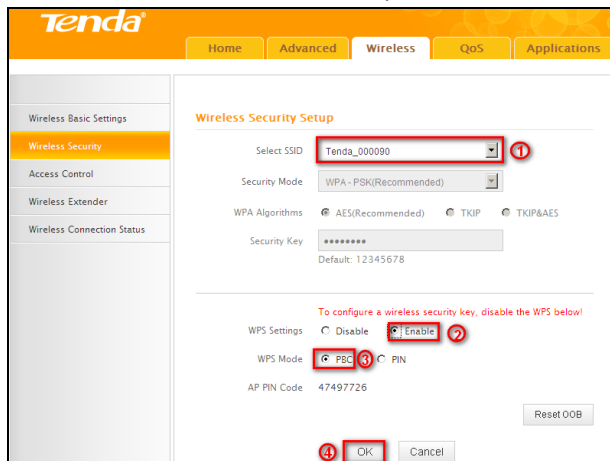

**PIN:** On the wireless security page, enable WPS, select PIN and enter the 8-digit PIN code from network adapter; then, within 2 minutes, enable WPS/PIN on the client device;

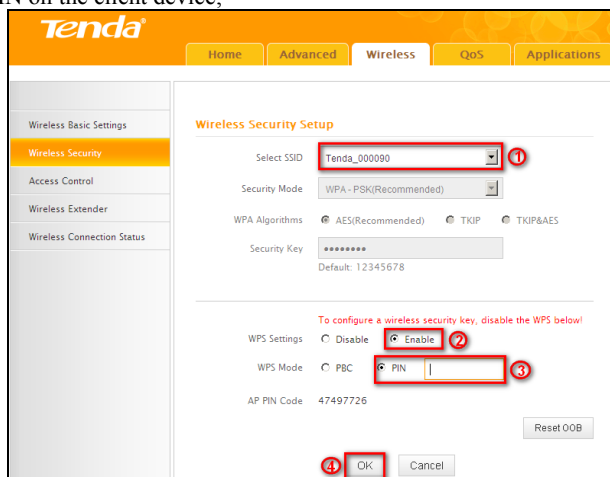


### ⚠️ Note:

1. With WPS successfully enabled, the WPS LED on the router keeps blinking for about 2 minutes, and during this time, you can enable WPS on a wireless

adapter; if the adapter successfully joins the wireless network, the WPS LED will display a solid light. Repeat steps above if you want to add more wireless adapters to the router.

2. **Reset OOB:** Clicking this button will reset SSID to factory default and disable security mode.
3. Existing wireless settings will still be maintained by default after a successful WPS connection. Namely security settings and SSID on the router will still be the same. If you want to generate a random wireless key via WPS, click **Reset OOB** and then follow WPS setup instructions above.

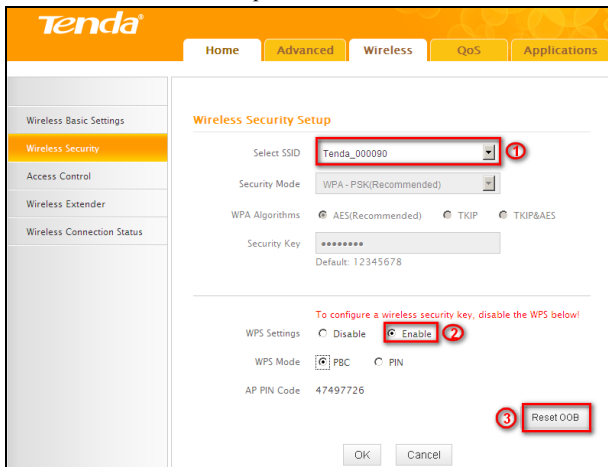

### ! Note:


1. To use the WPS security, the wireless client must be also WPS-capable.
2. Before you press the hardware WPS button on the device for WPS/PBC connection, making sure the WPS feature has been enabled on the device.

## 2.3 Wireless Extender


### WISP Mode

If your router acquires Internet access from a wireless Access Point, please select WISP mode. Specific steps are as follows:


1. Click **Wireless>Wireless Extender**, select **WISP mode** and click **Open Scan**.

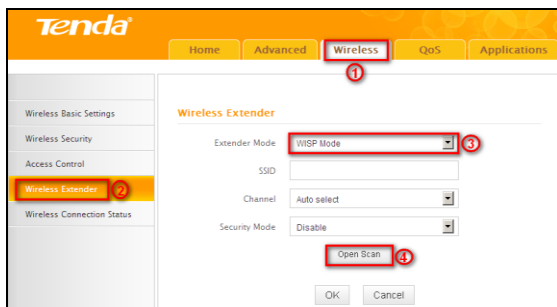


2. Click **Open Scan**, select the AP you wish to connect, such as Tenda-000248, and click **OK**.

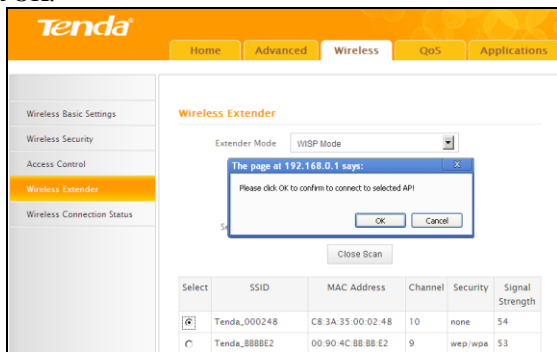


3. View and note down the wireless security settings: security mode, cipher type, security key.

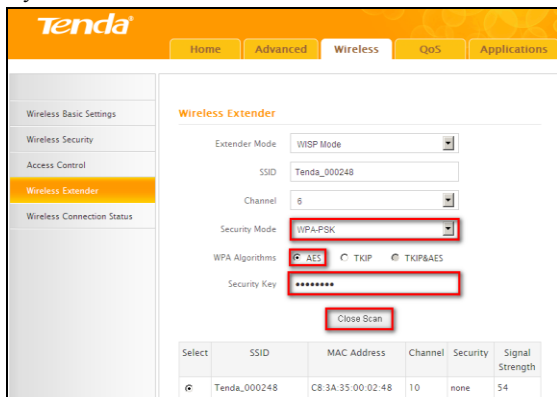


4. Click Close Scan and OK.

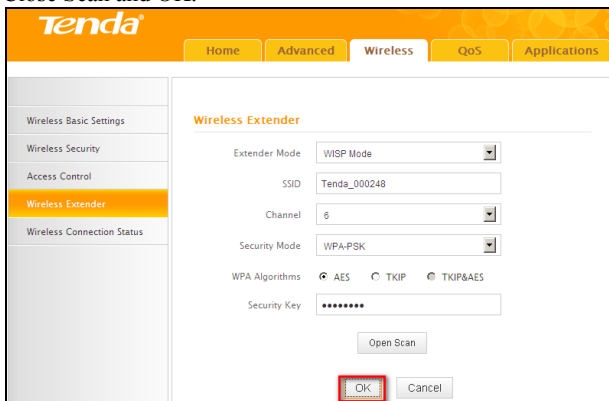


5. Save the settings and the router will reboot automatically.

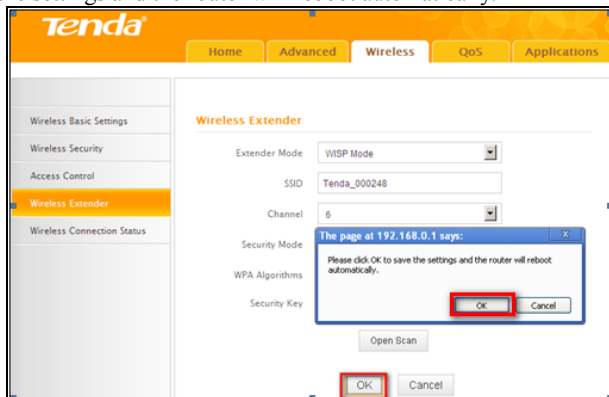

6. Internet Connection Setup: Click **Advanced**>**Internet Connection Setup**, select Internet Connection Setup, such as DHCP, and click **OK**.

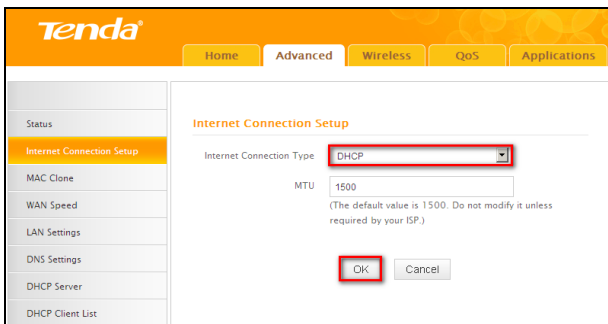

7. Click **Advanced>Status** and the connection status displays **Connected**.

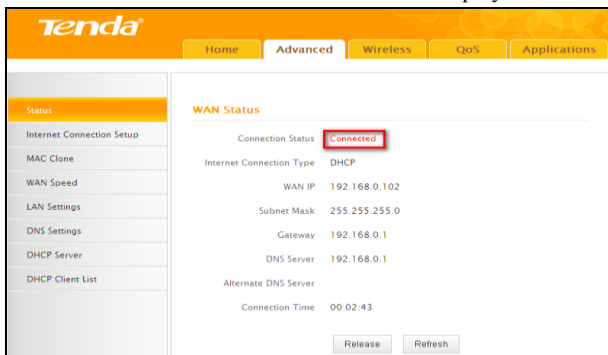

### ⚠️ Note:


1. When the settings finished, remember to enter **Internet Connection Setup** to set up Internet connection.
2. Verify that the SSID, channel, and security mode on the page match those of the added wireless network. If not, manually correct them.
3. For the normal wireless connection between two routers, do not change this router's SSID settings, including SSID, channel, security mode and security key.

## Universal Repeater Mode


In this mode, the router will relay data to an associated root AP and AP function is enabled meanwhile. The wireless repeater relays signal between its stations and the root AP for greater wireless range. Steps are shown as below:

1. Click **Wireless>Wireless Extender**, select **Universal Repeater** in the


extender mode and click **Open Scan**.

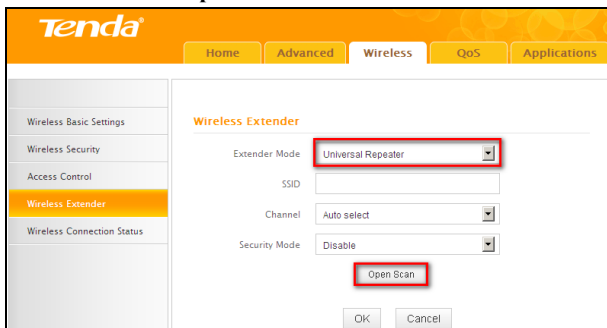


- Click **Open Scan**, select the AP you wish to connect, such as Tenda-15058C, and click **OK**.

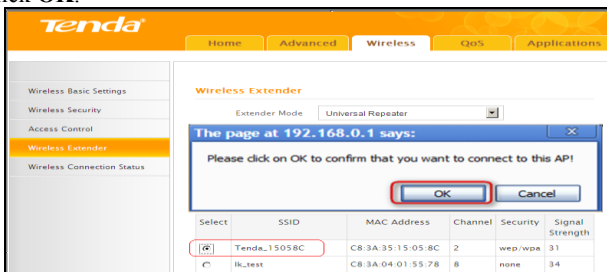


- View and note down the wireless security settings: security mode, cipher type, security key, etc., which should be in accordance with the upper device.

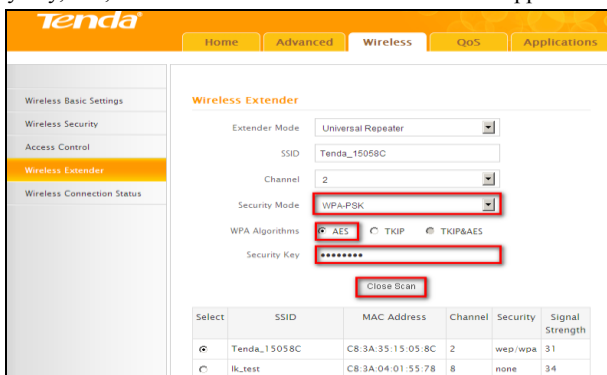

- Click **Close Scan** and **OK**.

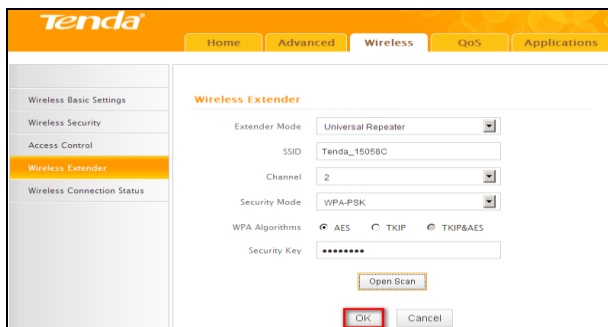


5. Save the settings and the router will restart automatically.

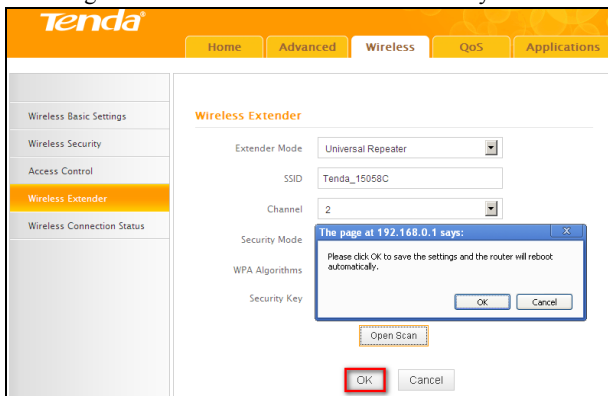

## WDS Bridge Mode

Wireless distribution system (WDS) is a system enabling the wireless interconnection of access points in an IEEE 802.11 network. It allows a wireless network to be expanded using multiple access points without the traditional requirement for a wired backbone to link them. Note: The Access Points you select must support WDS.



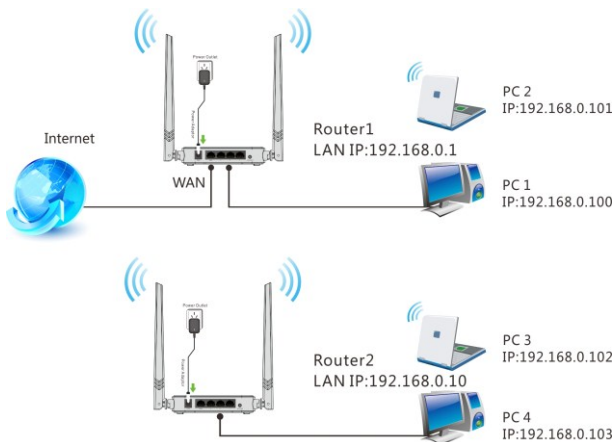


### For example:

As seen in the figure above, PC1 and PC2 access Internet via a wireless connection to Router 1. While PC3 and PC4 are too far to directly connect to Router 1 for Internet access. Now you can use the WDS bridge feature to let PC3 and PC4 access Internet.

### Before you get started:

1. View and note down the wireless security settings: security mode, cipher type, security key, etc. on Router 1; Click **Status>LAN Settings** and check the IP address.

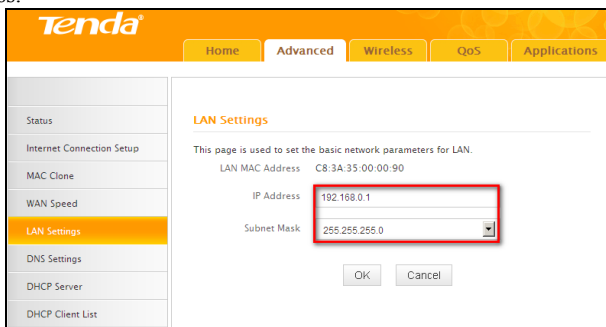

2. Click **Wireless>Wireless Basic Settings** to check router one's wireless basic settings.

The screenshot shows the Tenda router's web interface. The top navigation bar includes 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The 'Wireless' tab is selected. On the left, a sidebar lists 'Wireless Basic Settings', 'Wireless Security', 'Access Control', 'Wireless Extender', and 'Wireless Connection Status'. The main content area is titled 'Wireless Basic Settings' and contains the following configuration options:

- Enable Wireless:
- Network Mode: 11b/g/n mixed mode
- Primary SSID: Tenda\_17BED8
- Secondary SSID: Tenda\_000090
- SSID Broadcast:  Enable  Disable
- AP Isolation:  Enable  Disable
- Channel: Channel 6(2437MHz)
- Channel Bandwidth:  20  20/40
- Extension Channel: Channel 10(2457MHz)
- WMM Capable:  Enable  Disable
- APSD Capable:  Enable  Disable

3. Click Wireless>Wireless Security to check router one's wireless security settings.

The screenshot shows the Tenda router's web interface with the 'Wireless Security' tab selected in the sidebar. The main content area is titled 'Wireless Security Setup' and contains the following configuration options:

- Select SSID: Tenda\_17BED8
- Security Mode: WPA2 - PSK
- WPA Algorithms:  AES  TKIP  TKIP&AES
- Security Key: \*\*\*\*\*  
Default: 12345678

Below the main settings, there is a red warning message: "To configure a wireless security key, disable the WPS below!". Underneath, the 'WPS Settings' are set to  Disable  Enable. There is a 'Reset OOB' button and 'OK' and 'Cancel' buttons at the bottom.

4. Verify that DHCP server is enabled on Router 1: Click **Advanced>DHCP Server**.

The screenshot shows the Tenda web interface with the 'Advanced' tab selected. The 'DHCP Server' section is active, showing the following settings: DHCP Server is checked and set to 'Enable'. The IP Pool Start Address is 192.168.0.100 and the IP Pool End Address is 192.168.0.150. The Lease Time is set to 'One day'. There are 'OK' and 'Cancel' buttons at the bottom.

5. Set the LAN IP address of Router 2 to a different address yet on the same net segment as Router 1.

**As shown below:**

Router 1:

LAN IP: 192.168.0.1;

Subnet Mask: 255.255.255.0;

Router 2:

LAN IP: 192.168.0.10;

Subnet Mask: 255.255.255.0;

**Then do as follows:**


1. Configure Router 2:

1) Wireless Working Mode: Select WDS Bridge Mode.

2) Click **Open Scan** to search for Router 1.

The screenshot shows the Tenda web interface with the 'Wireless' tab selected. The 'Wireless Extender' section is active. The 'Extender Mode' dropdown menu is highlighted with a red box and set to 'WDS Bridge'. Other settings include SSID, Channel (Auto select), AP MAC Address, and Security Mode (Disable). There is an 'Open Scan' button and 'OK' and 'Cancel' buttons at the bottom. The 'OK' button is also highlighted with a red box.


3) Select the wireless network to connect and click **OK**.

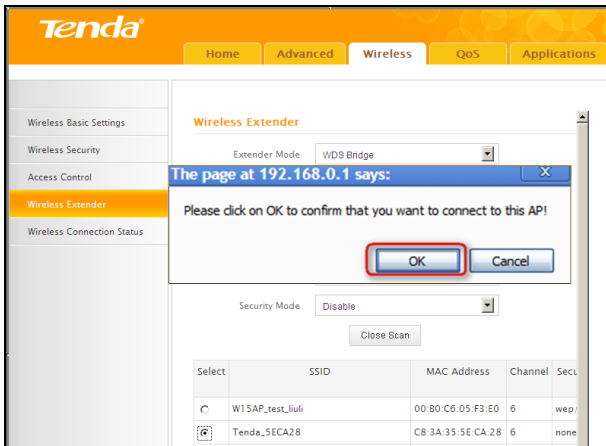


4) Verify that the SSID, channel, and AP MAC address on the page match those of the added wireless network. If not, manually correct them.

5) Close **Scan** and click **OK** to save your settings.

6) Go to Wireless Security page and set the wireless security settings exactly as they are on the link partner (Router 1).

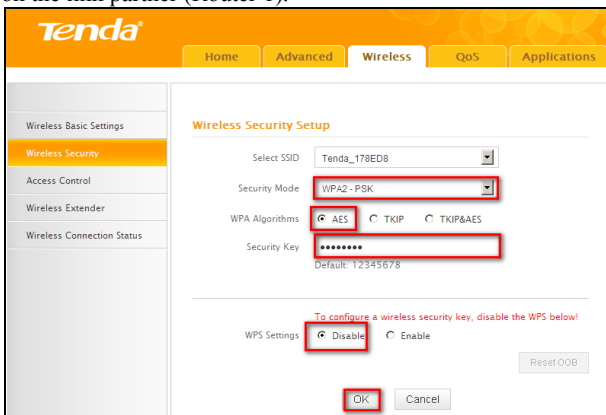


7) Go to **DHCP Server** to disable the DHCP on Router 2. Now you have finished all settings on Router 2 required for WDS.

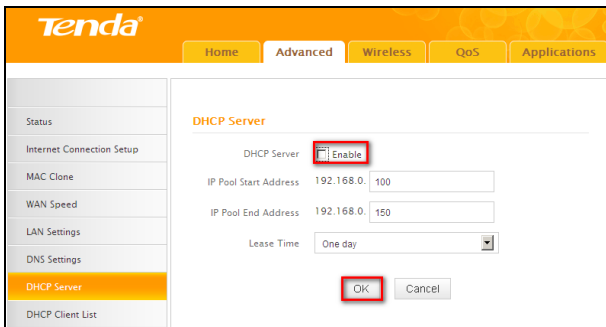

## 2. Configure Router 1:

1. Go to wireless section on Router 1 and specify **WDS (or WDS Bridge)** as its wireless working mode.
2. Manually enter Router 2's MAC address (Also, you can use the **Scan** option as mentioned above) and click **OK** to finish your settings.

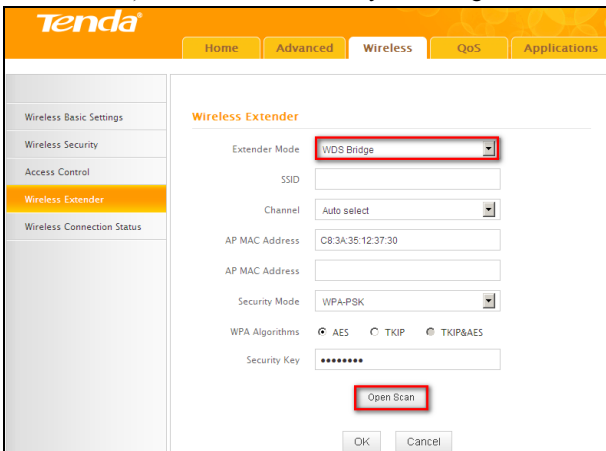


## 2.4 Wireless Access Control

The Access Control feature allows you to specify a list of devices to Permit or Forbid a connection to your wireless network via the devices' MAC addresses.


All other devices not listed as Permitted will be Forbidden and vice versa.

1. Select the wireless network (SSID) you wish to enable Access Control on.
2. MAC Address Filter: Select Permit or Forbid from the drop-down list.

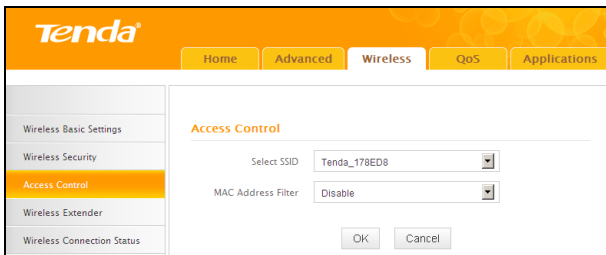

3. To permit a wireless device to connect to your wireless network, select Permit, enter its MAC address, click Add and then OK. Then only this device listed as “Permitted” will be able to connect to your wireless network; all other wireless devices will be forbidden.

**Example:** To forbid the PC at the MAC address of C8:3A:35:65:82:E6 from connecting to your wireless network, do as follows:

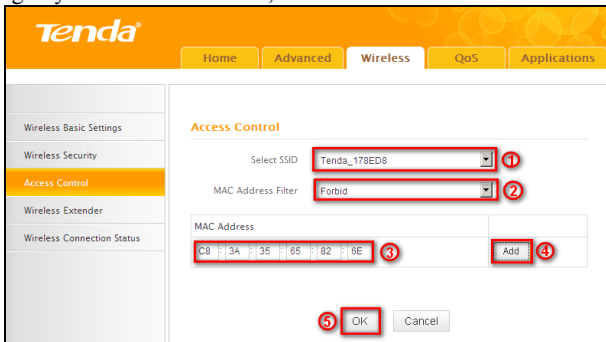

Step1. Select an SSID, say, **Tenda\_178ED8**.

Step2. Select **Forbid** from the corresponding drop-down menu.

Step3. Enter C8:3A:35:65:82:E6 in the MAC address box and click **Add**.

Step4. Click **OK** to save your settings. You can add more wireless MAC addresses you wish to forbid.

## 2.5 Wireless Client

Here you can see a list of wireless devices connected to the router, including their MAC addresses and bandwidth

The screenshot displays the Tenda router's web interface. At the top, there is a navigation bar with tabs for Home, Advanced, Wireless, QoS, and Applications. The 'Wireless' tab is selected. On the left, a sidebar menu lists various settings: Wireless Basic Settings, Wireless Security, Access Control, Wireless Extender, and Wireless Connection Status (which is highlighted in orange). The main content area is titled 'Wireless Connection Status'. It features a 'Select SSID' dropdown menu currently showing 'Tenda\_178ED8'. Below this, there is a section for 'The currently connected hosts list' with a 'Refresh' button. At the bottom, there is a table with three columns: 'NO.', 'MAC Address', and 'Bandwidth'.

⚠️ Note: The bandwidth here refers to the channel bandwidth instead of wireless connection rate.

## 3 Bandwidth Control

### 3.1 Bandwidth Control

Use this section to manage bandwidth allocation to devices on your LAN. If there are multiple PCs behind your router competing for limited bandwidth resource, then you can use this feature to specify a reasonable amount of bandwidth for each such PC, so that no one will be over stuffed or starved to death.

The screenshot shows the 'Bandwidth Control' configuration page in the Tenda router's web interface. The page has a navigation bar with 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The 'Bandwidth Control' section is active, showing a form with the following fields:

- Enable Bandwidth Control:** A checkbox labeled 'Enable' (1) is checked.
- IP Address:** Two input boxes containing '192.168.0.' (2) and '100' (2).
- Upload/Download:** A dropdown menu set to 'Upload' (3).
- Bandwidth Range:** Two input boxes containing '128' (4) and '128' (4).
- Enable:** A checkbox labeled 'Enable' (5) is checked.
- Add To List:** A button labeled 'Add To List' (6).

Below the form is a table with the following data:

No.	IP Range	Destination	Bandwidth Range	Enable	Edit	Delete
1	192.168.0.100-100	Upload	128-128	<input checked="" type="checkbox"/>	Edit	Delete

At the bottom of the form are 'OK' (7) and 'Cancel' buttons.

- 1. Enable Bandwidth Control:** Check or uncheck the box to Enable or disable the bandwidth control feature.
- 2. IP Address:** Specify the same IP address (say, 100, 100) or two different IP addresses (say, 100, 110) in both boxes to specify a single IP address or an IP range to which the current bandwidth control rule will apply.
- 3. Upload/Download:** Select to control bandwidth over data upload or download.
- 4. Bandwidth Range:** Specify an upload/download bandwidth range limit on specified PC(s). The unit is KByte/s. 1M=128KByte/s. Note that maximum upload/download bandwidth should not exceed your router's WAN bandwidth limit. (Consult your ISP if you are not clear.)
- 5. Enable:** Check to enable current rule. (When disabled, corresponding entry will not take effect though existing in fact.)
- 6. Add to List:** Click to add current rule to the rule list.



7. **OK:** Click to activate your settings.


#### For example:

If you are sharing a 4M broadband connection with a neighbor, who always exhausts the bandwidth resource downloading data, this feature will help. Simply specify half of the 4M bandwidth for your neighbor's PC (say, 192.168.0.100) and you will no longer need to struggle for bandwidth and your neighbor will only get up to 2M bandwidth. To do so, follow instructions below:

1. Check Enable.
2. Input "192.168.0.100" in both IP address boxes.
3. Select Download.
4. Enter "256" in both bandwidth range fields.
5. Check Enable.
6. Click Add To List
7. Click OK.

## 3.2 Traffic Statistics

Traffic Statistics allows you to see at a glance how much traffic each device in your network is using.

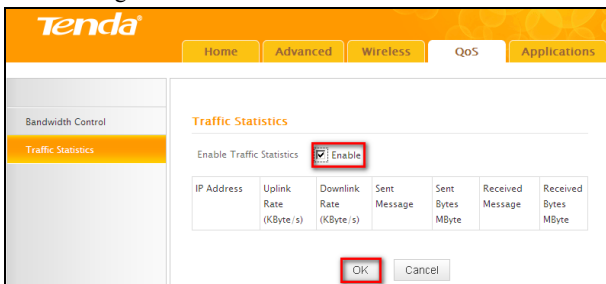

1. **Enable Traffic Statistics:** Check/uncheck the box to enable/disable the Traffic Statistics feature. To see at a glance how much traffic each device in your network is using, enable this option. However usually, disabling it may boost your network performance. This option is disabled by default. However, once enabled the page refreshes every five minutes.
  2. **OK:** Click to activate corresponding settings.
- IP Address:** Displays IP addresses of PCs connected to the device.
- Uplink Rate:** Displays the upload speed (KByte/s) of a corresponding PC.
- Downlink Rate:** Displays the download speed (KByte/s) of a corresponding PC.

**Sent Message:** Displays the number of packets sent by a corresponding PC via the device since Statistics is enabled.


**Sent Bytes:** Displays the number of Bytes sent by a corresponding PC via the device since Statistics is enabled. The unit is MByte.

**Received Message:** Displays the number of packets received by a corresponding PC via the device since Statistics is enabled.

**Received Bytes:** Displays the number of Bytes received by a corresponding PC via the device since Statistics is enabled. The unit is MByte.

## 4 Special Applications

### 4.1 Port Range Forwarding

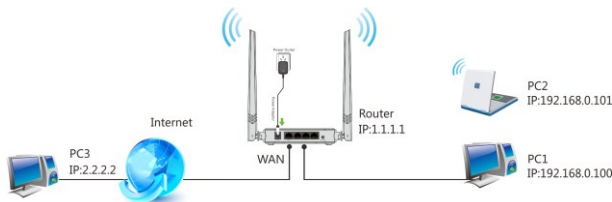

Port range forwarding is useful for web servers, ftp servers, e-mail servers, gaming and other specialized Internet applications. When you enable port forwarding, the communication requests from the Internet to your router's WAN port will be forwarded to the specified LAN IP address. As seen in the figure above, to let PC3 access service ports on PC1, you must first configure port forwarding settings on the router to which PC1 is uplinked.

Port range forwarding is useful for web servers, ftp servers, e-mail servers, gaming and other specialized Internet applications. When you enable the port range forwarding, the communication requests from the Internet to your router's WAN port will be forwarded to the specified LAN IP address.

NO.	Start Port-End Port	LAN IP	Protocol	Enable	Delete
1	21 - 21	192.168.0.100	TCP	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
3		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
4		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
5		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
6		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
7		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
8		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
9		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
10		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>

Well-known service ports: FTP(21) Add to ID 1

OK Cancel

1. **Start/End Port:** Specify a range of ports between 1~65535 (for a single port, enter the port number in both Start and End fields, say, 21 for FTP). Contact corresponding service provider if you don't know the port number of the service to use.

- LAN IP:** Specify the internal host's IP address. Be sure to statically assign the host's IP address to make this function constant.
- Protocol:** Specify the protocol required for the service utilizing the port(s).
- Enable:** Check to enable current settings.
- OK:** Click to activate your settings.

Now, your friends only need to enter ftp://xxx.xxx.xxx.xxx:21 in their browsers to access your FTP server xxx.xxx.xxx.xxx is the router's WAN IP address. Assuming it is 172.16.102.89, and then your friends need to enter ftp://172.16.102.89: 21 in their browsers.

**For example:** You want to share some large files with your friends who are not in your LAN; however it is not convenient to transfer such large files across network. Then, you can set up your own PC as a FTP server and use the Port (Range) Forwarding feature to let your friends access these files. Assuming that the static IP address of the FTP server (Namely, your PC) is 192.168.0.10, you want your friends to access this FTP server through default port of 21 using the TCP protocol, then do as follows:

- Start/End Port:** Enter 21 in both Start Port and End Port fields.
- LAN IP:** Enter 192.168.0.10
- Protocol:** Select TCP.
- Enable:** Check to enable current settings.
- OK:** Click to activate your settings.

Port range forwarding is useful for web servers, ftp servers, e-mail servers, gaming and other specialized Internet applications. When you enable the port range forwarding, the communication requests from the Internet to your router's WAN port will be forwarded to the specified LAN IP address.

NO.	Start Port-End Port	LAN IP	Protocol	Enable	Delete
1.	21 - 21	192.168.0.10	TCP	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
3.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
4.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
5.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
6.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
7.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
8.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
9.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>
10.		192.168.0.	TCP	<input type="checkbox"/>	<input type="checkbox"/>


Well-known service ports: FTP(21) Add to ID 1

OK Cancel

**Note:** If you include port 80 on this section, you must set the port for remote (web-based) management to a different number than 80, such as 8080, otherwise the virtual server feature may not take effect.

## 4.2 DMZ Host

The DMZ (De-Militarized Zone) function disables the firewall on the router for one device for a special purpose service such as Internet gaming or video conferencing. Enabling DMZ host may expose your local network to potential attacks. So it is advisable to use it with caution.

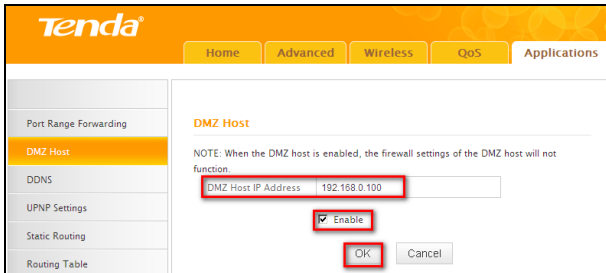

**DMZ Host IP Address:** The IP Address of the device for which the router's firewall will be disabled. Be sure to statically set the IP Address of that device for this function to be consistent.

**Enable:** Check/uncheck to enable/disable the DMZ host feature.

**OK:** Click to enable your settings.

### **Note:**

Once enabled, the DMZ host loses protection from device's firewall and becomes vulnerable to attacks.

## 4.3 DDNS

Dynamic DNS or DDNS is a term used for the updating in real time of Internet Domain Name System (DNS) name servers. Dynamic DNS or DDNS is a term used for the updating in real time of Internet Domain Name System (DNS) name servers. We use a numeric IP address allocated by Internet Service Provider (ISP) to connect to Internet; the address may either be stable ("static"), or may change from one session on the Internet to the next ("dynamic"). However, a numeric address is inconvenient to remember; an address which changes unpredictably makes connection impossible. The DDNS provider allocates a static host name to the user; whenever the user is allocated a new IP address this is

communicated to the DDNS provider by software running on a computer or network device at that address; the provider distributes the association between the host name and the address to the Internet's DNS servers so that they may resolve DNS queries. Thus, uninterrupted access to devices and services whose numeric IP address may change is maintained. (You need to have an account with one of the Service Providers in the drop-down menu first.)

The screenshot shows the DDNS configuration interface on a Tenda router. The interface includes a navigation menu on the left and a main configuration area. The 'DDNS' section is active, showing options to enable or disable the service. The 'Service Provider' is set to 'dydns.org', the 'Username' is 'tenda', the 'Password' is '123456', and the 'Domain Name' is 'tenda.dydns.org'. The 'OK' button is highlighted.

**DDNS Service:** Select to enable/disable the DDNS feature.

**Service Provider:** Select your DDNS service provider from the drop-down menu. (Here you can see a list of available service providers. Note that service providers not listed here are not available for use.)

**User Name:** Enter the registered user name.

**Password:** Enter the registered password.

**Domain Name:** Enter the domain name you register, say, tenda.dydns.org.

**OK:** Click to activate your settings.




**Note:**

This feature is usually used together with virtual server and is disabled by default. Configure necessary settings on port forwarding interface and enter the information provided by your DDNS service provider on the DDNS screen. Others can access your web server by simply entering `http://tenda.dydns.org` in their browser address bar.

#### 4.4 UPnP

The Universal Plug and Play (UPnP) feature allows network devices, such as computers from Internet, to access resources on local host or devices as needed. UPnP-enabled devices can be discovered automatically by the UPnP service

application on the LAN. This feature is enabled by default. No settings are required.

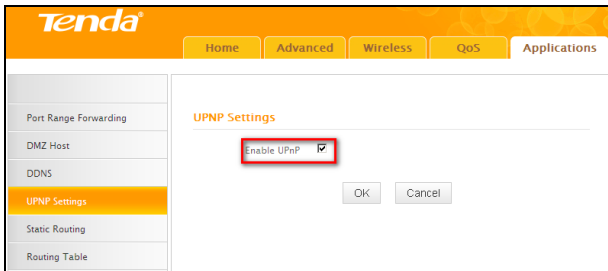


**Enable UPnP:** Check/uncheck to enable/disable the UPnP feature.

**OK:** Click to complete your settings.

## 4.5 Static Routing

When there are several routers in the network, you may want to set up static routing. Static routing determines the path of the data in your network. You can use this feature to allow users on different IP domains to access the Internet via this device. It is not recommended to use this setting unless you are familiar with static routing. In most cases, dynamic routing is recommended, because this feature allows the router to detect the physical changes of the network layout automatically. If you want to use static routing, make sure the router's DHCP function is disabled.

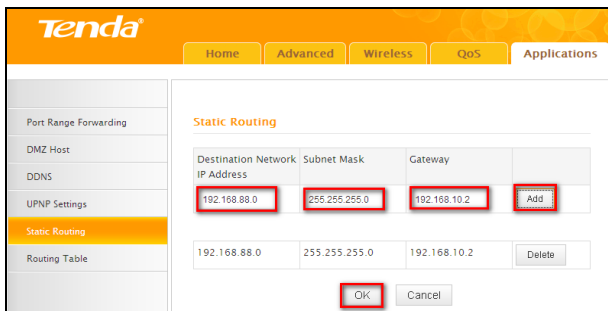

**1. Destination Network IP Address:** Specify a single IP address, say, 172.17.0.100, or an IP net segment, .say, 192.168.88.0.

**2. Subnet Mask:** Specify a Subnet Mask that corresponds to the specified destination IP.

**3. Gateway:** Specif the IP address for next hop.

**4. OK:** Click to activate your settings.

**⚠Note:**

1. Gateway must be on the same IP net segment as device's LAN/WAN IP address.
2. Subnet Mask must be entered 255.255.255.255 if destination IP address is a host.
3. Subnet Mask must be entered accordingly if destination IP address represents an IP network segment. It must correspond to the specified IP address. For example, for IP address of 10.0.0.0, you may enter a subnet mask of 255.0.0.0.

## 4.6 Routing Table

This page displays the device core routing table which lists destination IP, subnet mask, gateway, hop count and interface.

Destination IP	Subnet Mask	Gateway	Hops	Interface
192.168.0.0	255.255.255.0	192.168.0.0	0	br0

The principal task for a router is to look for an optimal transfer path for each data packet passing through it, and transfer it to the specified destination. To complete this work, the router stores and maintains related data of various transfer paths, i.e. establishing a routing table, for future route selection.



## 5 Security

### 5.1 URL Filter


To better control LAN PCs, you can use the URL filter functionality to allow or disallow such PCs to access certain websites within a specified time range.

- Filter Mode:** Select a proper filter mode, say, Forbid Only.
- Access Policy:** Select an access policy number, say, 1, from the drop-down list.
- Policy Name:** Briefly describe the current rule, say, baidu, (It can only consist of numbers, letters, or underscore).
- Start IP/End IP:** Enter the same IP address or 2 different IP addresses in both boxes to specify a single PC or a range of PCs for the current rule to apply to.
- URL Character String:** Enter the domain name you wish to filter out, say, baidu.
- Time:** Specify a time period for a current rule to take effect. If the field is set to 0:00-0:00, the rule will be applied 24hrs/day.
- Day(s):** Select a day or several days for a current rule to take effect. If Sun-Sat is selected, the rule will apply 7days/week.
- Enable:** Check/uncheck to enable/disable the feature.
- OK:** Click to activate your settings.

#### Example:

If you want to disallow all computers on your LAN to access youtube.com from 8: 00 to 18: 00 during working days: Monday- Friday, then do as follows:

1. **Filter Mode:** Select Forbid Only.
2. **Access Policy:** Select an access policy number, say, 1, from the drop-down list.
3. **Policy Name:** Briefly describe the current rule, say, baidu, (It can only consist of numbers, letters, or underscore).
4. **Start IP/End IP:** Enter 2-254.
5. **URL Character String:** Enter baidu.
6. **Time:** Select 8:00-18:00.Day(s): Select Monday to Friday.
7. **Enable:** Check the Enable box.
8. **OK:** Click to save your settings.


 **Note:** Each rule can only include one domain name. Simply add more rules accordingly, if you want to filter multiple domain names.

## 5.2 MAC Filter

This section allows you to set the times specific clients can or cannot access the Internet via the devices' MAC Addresses.

**Forbid Only:** Specify a list of devices to Forbid access to Internet. All other devices not listed as Forbidden will be permitted.

**Permit Only:** Specify a list of devices to Permit access to Internet. All other devices not listed as "Permitted" will be forbidden.

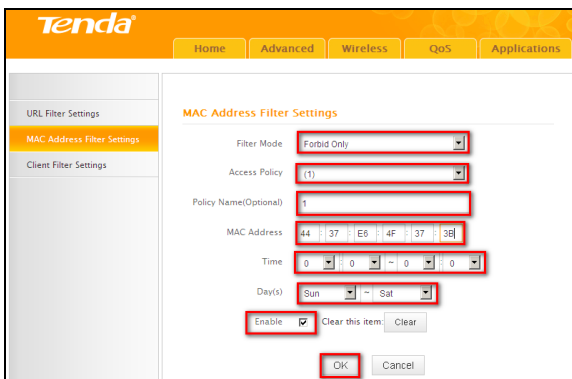

The screenshot shows the Tenda router's web interface for configuring MAC Address Filter Settings. The page has a navigation bar with 'Home', 'Advanced', 'Wireless', 'QoS', and 'Applications'. The left sidebar shows 'URL Filter Settings', 'MAC Address Filter Settings' (highlighted), and 'Client Filter Settings'. The main content area is titled 'MAC Address Filter Settings' and contains the following fields:

- Filter Mode: A dropdown menu set to 'Forbid Only'.
- Access Policy: A dropdown menu set to '(1)'.
- Policy Name(Optional): A text input field containing '1'.
- MAC Address: A text input field containing '44:37:E6:4F:37:3E'.
- Time: A time range selector set to '0:00-0:00'.
- Day(s): A dropdown menu set to 'Sun-Sat'.
- Enable: A checked checkbox.
- Clear this item: A button.
- Clear: A button.
- OK: A button.
- Cancel: A button.

1. **Filter Mode:** Select a proper filter mode, say, **Forbid Only**.
2. **Access Policy:** Select an access policy number, say, 1, from the drop-down list.

- 3. Policy Name:** Briefly describe the current rule (It can only consist of numbers, letters, or underscore).
- 4. MAC Address:** Specify a MAC address for a corresponding MAC filter rule to apply to.
- 5. Time:** Specify a time period for a current rule to take effect. If the field is set to 0:00-0:00, the rule will be applied 24hrs/day.
- 6. Day(s):** Select a day or several days for a current rule to take effect. If Sun-Sat is selected, the rule will apply 7days/week.
- 7. Enable:** Check/uncheck to enable/disable the feature.
- 8. OK:** Click to activate your settings.

**For Example:**

To allow a PC at the MAC address of 00:E4:A5:44:35:69 to access Internet from Monday to Friday.

- a) **Filter Mode:** Select **Permit Only**.
- b) **Access Policy:** Select an access policy number, say, 1, from the drop-down list.
- c) **Policy Name:** Briefly describe the current rule, say, **Permit\_only**, (It can only consist of numbers, letters, or underscore).
- d) **MAC Address:** Enter 00:E4:A5:44:35:69.
- e) **Time:** Select 0 for all fields to apply the rule 24hrs/day.
- f) **Day(s):** Select Monday to Friday.
- g) **Enable:** Check the **Enable** box.
- h) **OK:** Click to save your settings.

**Tenda**

Home Advanced Wireless QoS Applications

URL Filter Settings

**MAC Address Filter Settings**

Client Filter Settings

**MAC Address Filter Settings**

Filter Mode: Permit Only

Access Policy: (1)

Policy Name(Optional): 1

MAC Address: 00 : E4 : A5 : 44 : 35 : 69

Time: 0 : 0 ~ 0 : 0

Day(s): Mon ~ Fri

Enable:  Clear this item: Clear

OK Cancel

### 5.3 Client Filter

This section allows you to set the times specific clients can or cannot access the Internet via the devices' assigned IP addresses and service port.

**Forbid Only:** Only PCs listed as Forbidden will be forbidden from accessing specified services; others are not restricted;

**Permit Only:** Only PCs listed as permitted will be permitted to access specified services; others will be forbidden.

**Filter Mode:** Select Permit Only.

**Access Policy:** Select an access policy number, say, 1, from the drop-down list.

**Policy Name:** Briefly describe the current rule, say, 80.

**Start IP/End IP:** Enter the same IP address, say, 110, or 2 different IP addresses, say, 110 and 120 in both boxes to specify a single PC or a range of PCs for the current rule to apply to.

**Port:** Specify TCP/UDP protocol port number (s), say, 80.

**Type:** Select Both.

**Time:** Specify a time period for a current rule to take effect. If the field is set to 0:00-0:00, the rule will be applied 24hrs/day.

**Day(s):** Specify a day or several days for a current rule to take effect.

**Enable:** Check/uncheck to enable/disable the feature.

**OK:** Click to activate your settings.

**For example:**

If you want to prohibit PCs within the IP address range of

192.168.0.100--192.168.0.120 from accessing Internet, do as follows:

**Client Filter Settings**

Filter Mode: Forbid Only

Access Policy: (1)

Policy Name(Optional): 123

Start IP: 192.168.0.100

End IP: 192.168.0.120

Port: 1

Type: Both

Time: 0 0 ~ 0 0

Day(s): Sun Sat

Enable:  Clear this item: Clear

OK Cancel

**Help**

This section allows you to set the times specific clients can or cannot access the Internet via the devices' IP addresses. Select a Policy from the drop-down menu and briefly describe it in the corresponding field. You can set the access restriction or permission in detail including the time period, and specific days of the week.


When Time is set to 0:0 to 0:0, the rule will be applied 24 hrs/day.

1. **Filter Mode:** Select Forbid Only.
2. **Access Policy:** Select an access policy number, say, 1, from the drop-down list.
3. **Policy Name:** Briefly describe the current rule, say, 123.
4. **Start IP:** Enter 100.
5. **End IP:** Enter 120.
6. **Port:** Enter 1-65535 to forbid all Internet services and applications.
7. **Type (or Protocol):** Select Both.
8. **Time:** Select 0 for all fields to apply the rule 24hrs/day.
9. **Day(s):** Select Sun-Sat to apply the rule 7days/week.
10. **Enable:** Check the Enable box.
11. **OK:** Click to activate your settings.

## 6 Tools


### 6.1 Reboot

Reboot the device to activate your settings. WAN connection will be disconnected during reboot.

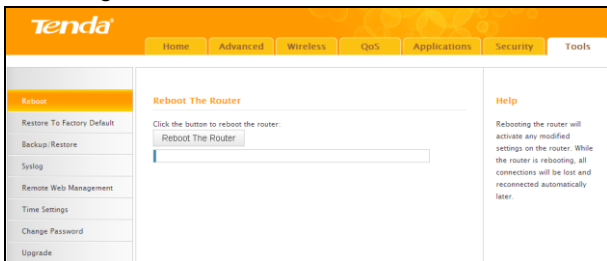

### 6.2 Restore to Factory Default Settings

Click the **Restore to Factory Default** button to reset device to factory default settings. You need to reconfigure the device for Internet access as well as many other settings including wireless settings.

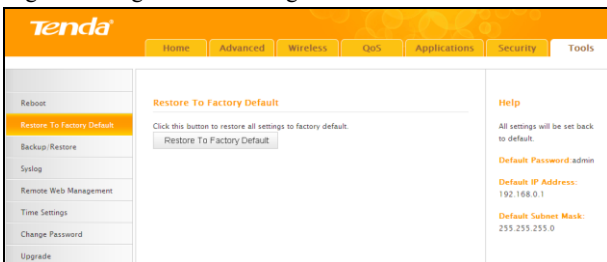

The factory default settings are listed below:

IP Address: 192.168.0.1

Subnet mask: 255.255.255.0.

#### **Note:**


To activate your settings, you need to reboot the device after you reset it.

### 6.3 Backup/Restore


**Backup:** Once you have configured the device the way you want it, you can save these settings to a configuration file on your local hard drive that can later

be imported to your device in case that the device is restored to factory default settings. To do so, follow below instructions:

1. Click the **Backup** button and specify a directory to save settings on your local hardware.

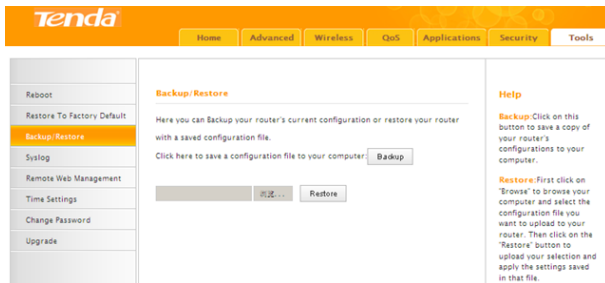


2. Click OK to save the configuration file.

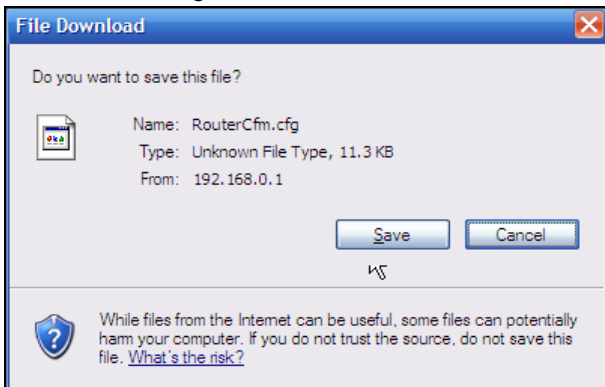


**To restore previous settings, do as follows:**

Click the **Browse** button to locate and select a configuration file that is saved previously to your local hard drive.

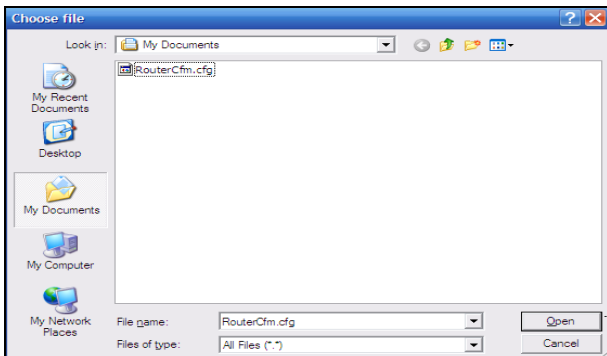


Click the **Restore** button to reset your device to previous settings.

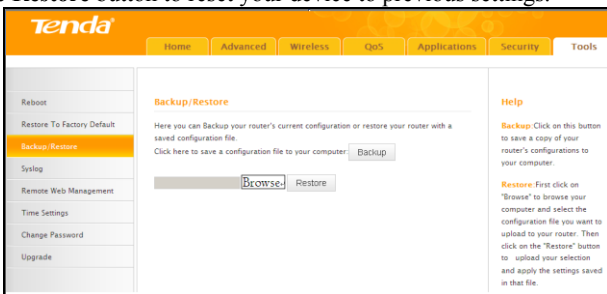

## 6.4 Syslog

Here you can view the history of the device's actions. After 150 entries, the earliest logs will clear automatically.

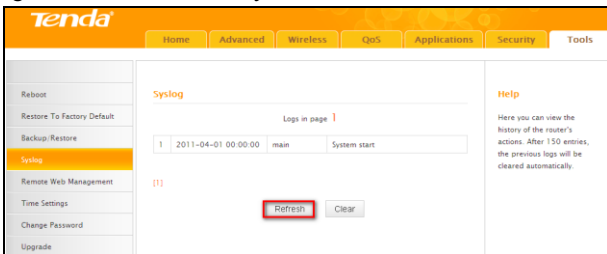

## 6.5 Remote Web Management

The Remote management allows the device to be configured and managed



remotely from the Internet via a web browser.




- 1. Enable:** Check/uncheck to enable/disable the DMZ host feature.
- 2. Port:** This is the management port to be open to outside access. The default setting is 8080. Do NOT change it unless instructed by your ISP.
- 3. IP Address:** Here you can specify the IP Address Range for remote management (When set to 0.0.0.0, the device becomes remotely accessible to all the PCs on Internet or other external networks).
- 4. OK:** Click to activate your settings.

### Note:

- To access the device via port 8080, enter "http://x.x.x.x:8080" where "x.x.x.x" represents the the device's Internet IP address and 8080 is the remote admin port. Assuming the device's Internet IP address is 220.135.211.56, then, simply replace the "x.x.x.x" with "220.135.211.56" (namely, http://220.135.211.56:8080).
- Leaving the IP address field at "0.0.0.0" makes the device remotely accessible to all the PCs on Internet or other external networks; populating it with a specific IP address, say, 218.88.93.33, makes the device only remotely accessible to the PC at the specified IP address.

## 6.6 Time


This page is used to set the router's system time. You can choose to set the time manually or get the GMT time from the Internet and the system will automatically connect to NTP server to synchronize the time.

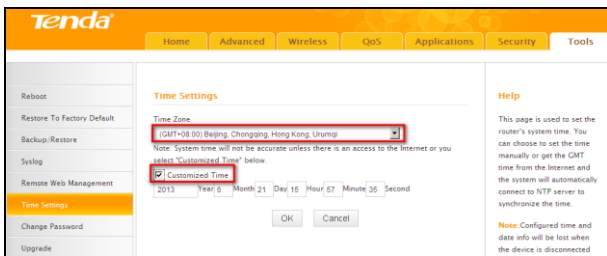**Note:**

Configured time and date info will be lost when the device gets disconnected from power supply. However, it will be updated automatically when the device reconnects to Internet. To activate time-based features (e.g. firewall), the time and date info shall be set correctly first, either manually or automatically.

## 6.7 Login Password

This section allows you to change login password for accessing device's Web-based interface for better security.

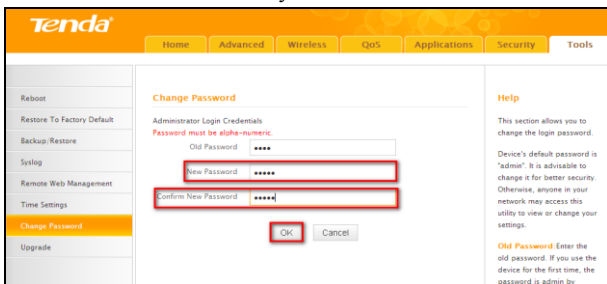


- New Password:** Enter a new password, say, 12345 (Note that the password can only be alphanumeric).
- Confirm New Password:** Re-enter the new password for confirmation.
- OK:** Click to activate your settings.

**Note:**

For security purpose, it is highly recommended that you change Device's default login password.

## 6.8 Firmware Upgrade

Firmware upgrade is released periodically to improve the functionality of your device and also to add new features. If you run into a problem with a specific feature of the device, log on to our website ([www.tendacn.com](http://www.tendacn.com)) to download the latest firmware to update your device.

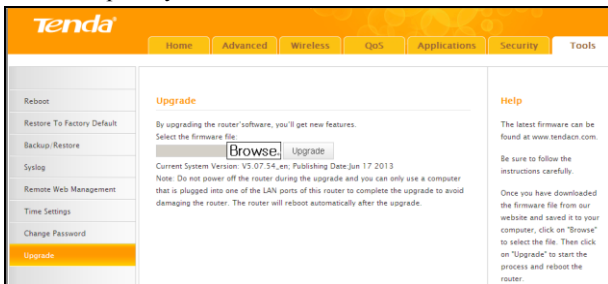

1. **Browse:** Click to locate and select the firmware.
2. **Upgrade (or Update):** Click to update firmware. Device will restart automatically when update completes.



### Note:

1. Before you upgrade the firmware, making sure you are having a correct firmware. A wrong firmware may damage the device.
2. Do NOT upgrade the firmware wirelessly or disconnect device from power supply while firmware update is in process. Note that you need to update the device's firmware via a wired connection.

## Appendix 1 Glossary

### Channel

A communication channel, also known as channel, refers either to a physical transmission medium such as a wire or to a logical connection over a multiplexed medium such as a radio channel. It is used to transfer an information signal, such as a digital bit stream, from one or more transmitters to one or more receivers. If there is only one AP in the range, select any channel you like. The default is **Auto**.

If there are several APs coexisting in the same area, it is advisable that you select a different channel for each AP to operate on, minimizing the interference between neighboring APs. For example, if 3 American-standard APs coexist in one area, you can set their channels respectively to 1, 6 and 11 to avoid mutual interference.

### SSID

Service set identifier (SSID) is used to identify a particular 802.11 wireless LAN. It is the name of a specific wireless network. To let your wireless network adapter roam among different APs, you must set all APs' SSID to the same name.

### WPA/WPA2

The WPA protocol implements the majority of the IEEE 802.11i standard. It enhances data encryption through the Temporal Key Integrity Protocol (TKIP) which is a 128-bit per-packet key, meaning that it dynamically generates a new key for each packet. WPA also includes a message integrity check feature to prevent data packets from being hampered with. Only authorized network users can access the wireless network. The later WPA2 protocol features compliance with the full IEEE 802.11i standard and uses Advanced Encryption Standard (AES) in addition to TKIP encryption protocol to guarantee better security than that provided by WEP or WPA. Currently, WPA is supported by Windows XP SP1.

### IEEE 802.1X Authentication

IEEE 802.1X Authentication is an IEEE Standard for port-based Network Access Control (PNAC). It is part of the IEEE 802.1 group of networking

protocols. It provides an authentication mechanism to devices wishing to attach to a LAN or WLAN. IEEE 802.1X defines the encapsulation of EAP over LAN or EAPOL. 802.1X authentication involves three parties: a supplicant, an authenticator, and an authentication server. The supplicant is a client device (such as a laptop) that wishes to attach to the LAN/WLAN - though the term 'supplicant' is also used interchangeably to refer to the software running on the client that provides credentials to the authenticator. The authenticator is a network device, such as an Ethernet switch or wireless access point; and the authentication server is typically a host running software supporting the RADIUS and EAP protocols. The authenticator acts like a security guard to a protected network. The supplicant (i.e. client device) is not allowed access through the authenticator to the protected side of the network until the supplicant's identity has been validated and authorized. With 802.1X port-based authentication, the supplicant provides credentials, such as user name / password or digital certificate, to the authenticator, and the authenticator forwards the credentials to the authentication server for verification. If the authentication server determines the credentials are valid, the supplicant (client device) is allowed to access resources located on the protected side of the network.

### **PPPOE**

The Point-to-Point Protocol over Ethernet (PPPoE) is a network protocol for encapsulating PPP frames inside Ethernet frames. Integrated PPP protocol implements authentication, encryption, and compression functions that traditional Ethernet cannot provide and can also be used in the cable modem and digital subscriber line (DSL) and Ethernet that provide access service to the users. Essentially, it is a protocol that allows to establish a point-to-point tunnel between two Ethernet interfaces within an Ethernet broadcast domain.

### **DNS**

The Domain Name System (DNS) is a hierarchical distributed naming system for computers, services, or any resource connected to the Internet or a private network. It associates various information with domain names assigned to each of the participating entities. A Domain Name Service resolves queries for these names into IP addresses for the purpose of locating computer services and devices worldwide. An often-used analogy to explain the Domain Name System is that it serves as the phone book for the Internet by translating human-friendly

computer hostnames into IP addresses.

## **WDS**

A wireless distribution system (WDS) is a system enabling the wireless interconnection of access points in an IEEE 802.11 network. It allows a wireless network to be expanded using multiple access points without the traditional requirement for a wired backbone to link them. All base stations in a wireless distribution system must be configured to use the same radio channel, method of encryption (none, WEP, or WPA) and the same encryption keys. They may be configured to different service set identifiers. WDS also requires every base station to be configured to forward to others in the system. WDS may also be considered a repeater mode because it appears to bridge and accept wireless clients at the same time (unlike traditional bridging). WDS may be incompatible between different products (even occasionally from the same vendor) since it is not certified by the Wi-Fi Alliance. WDS may provide two modes of wireless AP-to-AP connectivity:


Wireless bridging, in which WDS APs communicate only with each other and don't allow wireless clients or stations (STA) to access them.

Wireless repeating, in which APs communicate with each other and with wireless STAs.

## **DMZ**


In computer security, a DMZ (sometimes referred to as a perimeter networking) is a physical or logical subnetwork that contains and exposes an organization's external-facing services to a larger untrusted network, usually the Internet. The purpose of a DMZ is to add an additional layer of security to an organization's local area network (LAN); an external attacker only has access to equipment in the DMZ, rather than any other part of the network. Hosts in the DMZ have limited connectivity to specific hosts in the internal network, although communication with other hosts in the DMZ and to the external network is allowed. This allows hosts in the DMZ to provide services to both the internal and external network, while an intervening firewall controls the traffic between the DMZ servers and the internal network clients. Any services such as Web servers, Mail servers, FTP servers and VoIP servers, etc. that are being provided to users on the external network can be placed in the DMZ.

## Appendix 2 Verify the WDS Connection

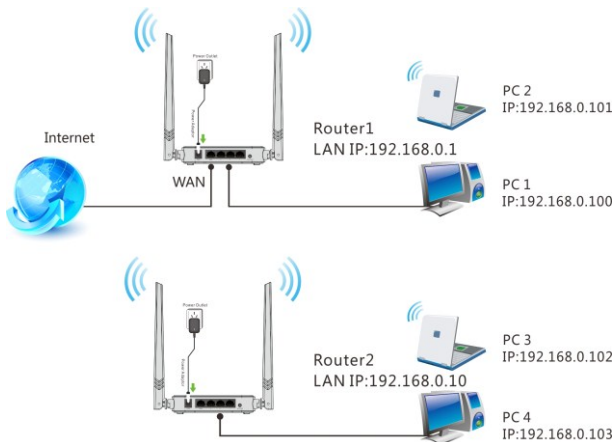


### Configure PC2:

Click **Start** > **Run** on PC3, input cmd on the appearing window and then click OK.

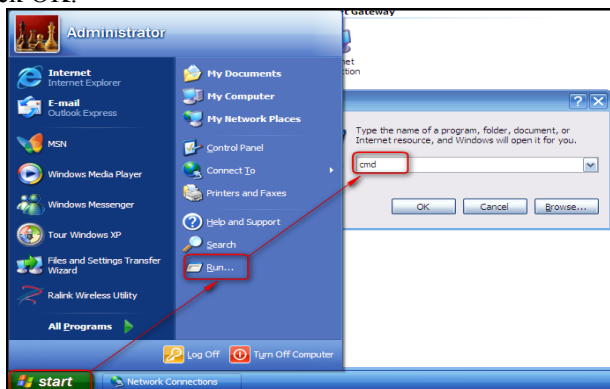

Input **ping 192.168.0.1** and press **Enter**.

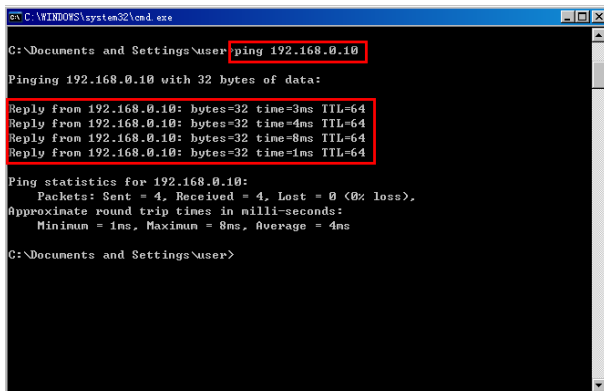

```
C:\WINDOWS\system32\cmd.exe

C:\Documents and Settings\user>ping 192.168.0.10

Pinging 192.168.0.10 with 32 bytes of data:


Reply From 192.168.0.10: bytes=32 time=3ms TTL=64
Reply From 192.168.0.10: bytes=32 time=4ms TTL=64
Reply From 192.168.0.10: bytes=32 time=8ms TTL=64
Reply From 192.168.0.10: bytes=32 time=1ms TTL=64

Ping statistics for 192.168.0.10:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 1ms, Maximum = 8ms, Average = 4ms

C:\Documents and Settings\user>
```


### Configure PC3 and PC4:

1. Set PC3 and PC4 to Obtain an IP address automatically.

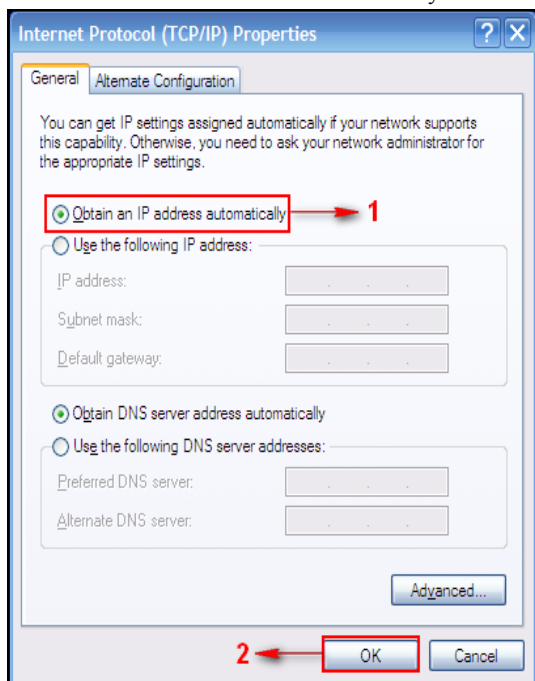




2. When the two PCs get IP addresses,

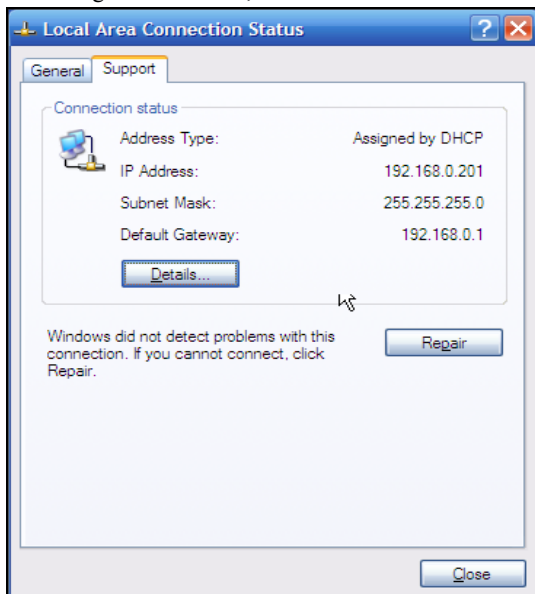

try below steps to verify the WDS connection:

Click **Start**-> **Run** on PC3, input **cmd** on the appearing window and then click **OK**.

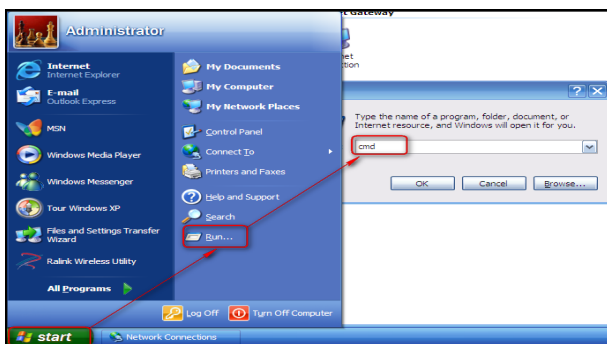

Input **ping 192.168.0.1** and press **Enter**. If you get a screen as seen below, you have successfully implemented WDS.

```
ex C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\Administrator>ping 192.168.0.1

Pinging 192.168.0.1 with 32 bytes of data:

Reply from 192.168.0.1: bytes=32 time=4ms TTL=64
Reply from 192.168.0.1: bytes=32 time<1ms TTL=64
Reply from 192.168.0.1: bytes=32 time<1ms TTL=64
Reply from 192.168.0.1: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 4ms, Average = 1ms
```

 **Note:**

1. WDS feature can only be implemented between 2 WDS-capable wireless devices. Plus, SSID, channel, security settings and security key must be exactly the same on both such devices.
2. To ensure a proper wireless connection, do not change any settings on the two devices after WDS is successfully implemented.

## Appendix 3 FAQs

This section provides solutions to problems that may occur during installation and operation of the device. Read the following if you are running into problems. If your problem is not covered here, please feel free to go to [www.tendacn.com](http://www.tendacn.com) to find a solution or email your problems to: [support@tenda.com.cn](mailto:support@tenda.com.cn) or [support02@tenda.com.cn](mailto:support02@tenda.com.cn). We will be more than happy to help you out as soon as possible.

### **1. Q: I entered the device's LAN IP address in the web browser but cannot access the utility. What should I do?**

**a.** Check whether device is functioning correctly. The SYS LED should blink a few seconds after device is powered up. If it does not light up, then some internal faults may have occurred.

**b.** Verify physical connectivity by checking whether a corresponding port's link LED lights up. If not, try a different cable. Note that an illuminated light does NOT ALWAYS indicate successful connectivity.

**c.** Run the "ping 192.168.0.1" command. If you get replies from 192.168.0.1, open your browser and verify that Proxy server is disabled. In case that ping fails, press and hold the "RESET" button on your device for 7 seconds to restore factory default settings, and then run "ping192.168.0.1" again.

**d.** Contact our technical support for help if the problem still exists after you tried all the above.

### **2. Q: What should I do if I forget the login password to my device?**

**A:** Reset your device by pressing the Reset button for over 7 seconds. Note: All settings will be deleted and restored to factory defaults once you pressed the Reset button.

### **3. Q: My computer shows an IP address conflict error after having connected to the device. What should I do?**

**a.** Check if there are other DHCP servers present in your LAN. If there are other DHCP servers except your router, disable them immediately.

**b.** The default IP address of the device is 192.168.0.1; make sure this address is not used by another PC or device. In case that two computers or devices share the same IP addresses, change either to a different address.

### **4.Q: I cannot access Internet and send/receive emails; what should I do?**

This problem mainly happens to users who use the PPPoE or Dynamic IP

Internet connection type. You need to change the MTU size (1492 by default). In this case, go to “WAN Settings” to change the MTU value from default 1480 to 1450 or 1400, etc.

### **5. Q: How do I share resources on my computer with users on Internet through the device?**

To let Internet users access internal servers on your LAN such as e-mail server, Web, FTP, via the device, use the "Virtual Server" feature. To do so, follow steps below:

Step 1: Create your internal server, make sure the LAN users can access these servers and you need to know related service ports, for example, port number for Web server is 80; FTP is 21; SMTP is 25 and POP3 is 110.

Step 2: Enter Port Forwarding (also called Port Range Forwarding on some products) screen from device web UI.

Step 3: Complete the Start Port (also called External/Ext Port on some products) and End Port (also known as Internal/Int Port on some products) fields, say, 80-80.

Step 5: Input the internal server's IP address. For example, assuming that your Web server's IP address is 192.168. 0.10, then simply input it.

Step 6: Select a proper protocol type: TCP, UDP, or Both depending on which protocol(s) your internal host is using.

Step 7: Click Enable and save your settings.

For your reference, we collected a list of some well-known service ports as follows:


Server	Protocol	Service Port
Web Server	TCP	80
FTP Server	TCP	21
Telnet	TCP	23
Net Meeting	TCP	1503、 1720
MSN Messenger	TCP/UDP	File Send:6891-6900(TCP) Voice:1863, 6901(TCP) Voice:1863, 5190(UDP)
PPTP VPN	TCP	1723
Iphone5.0	TCP	22555
SMTP	TCP	25
POP3	TCP	110

## Appendix 4 Remove Wireless Network from Your PC


If you change wireless settings on your wireless device, you must remove them accordingly your PC; otherwise, you may not be able to wirelessly connect to the device. Below describes how to do remove a wireless network from your PC.

**If you are using Windows XP, do as follows:**

1.Right click "My Network Places" and select "Properties".

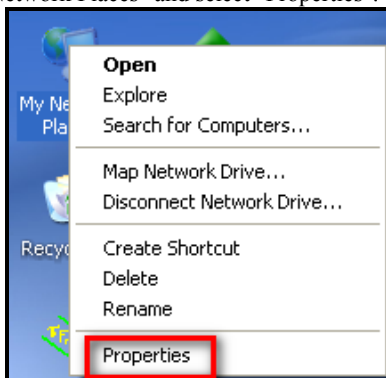

2.Click “Wireless Network Connection” and then select “Properties”.

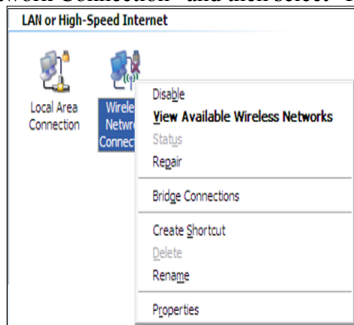


3. Click "Wireless Networks", select the item under "Preferred networks" and then click the Remove button.




**If you are using Windows 7, do as follows:**


1. Click Network from your desktop and select Properties.

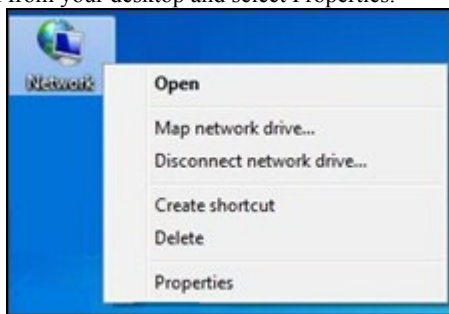

## 2. Select "Manage Wireless Networks".

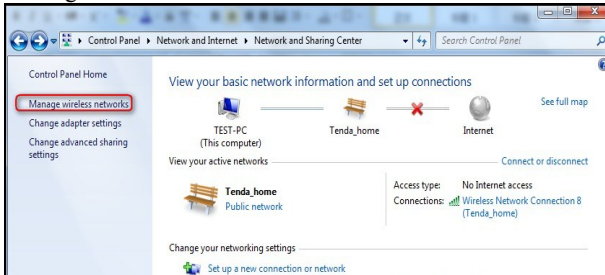

## 3. Click the wireless connection and select "Remove network".

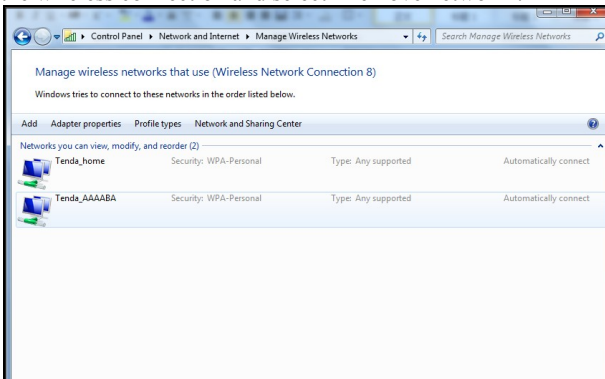

## **Appendix 5 Safety and Emission Statement**

### **CE Mark Warning**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. This device complies with EU 1999/5/EC.

### **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

### **Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an



uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

 **Note:**

1. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.
2. To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.